Canon

EOS 3 **REF.NO.C12-8361**

SEMI HARD CASE EHII-L	**C46-2021**
EHII-LL	**C46-2022**
NECK STRAP L3	**C56-1462**
HAND STRAP E1	**C56-1441**

PARTS CATALOG

CANON EOS-3

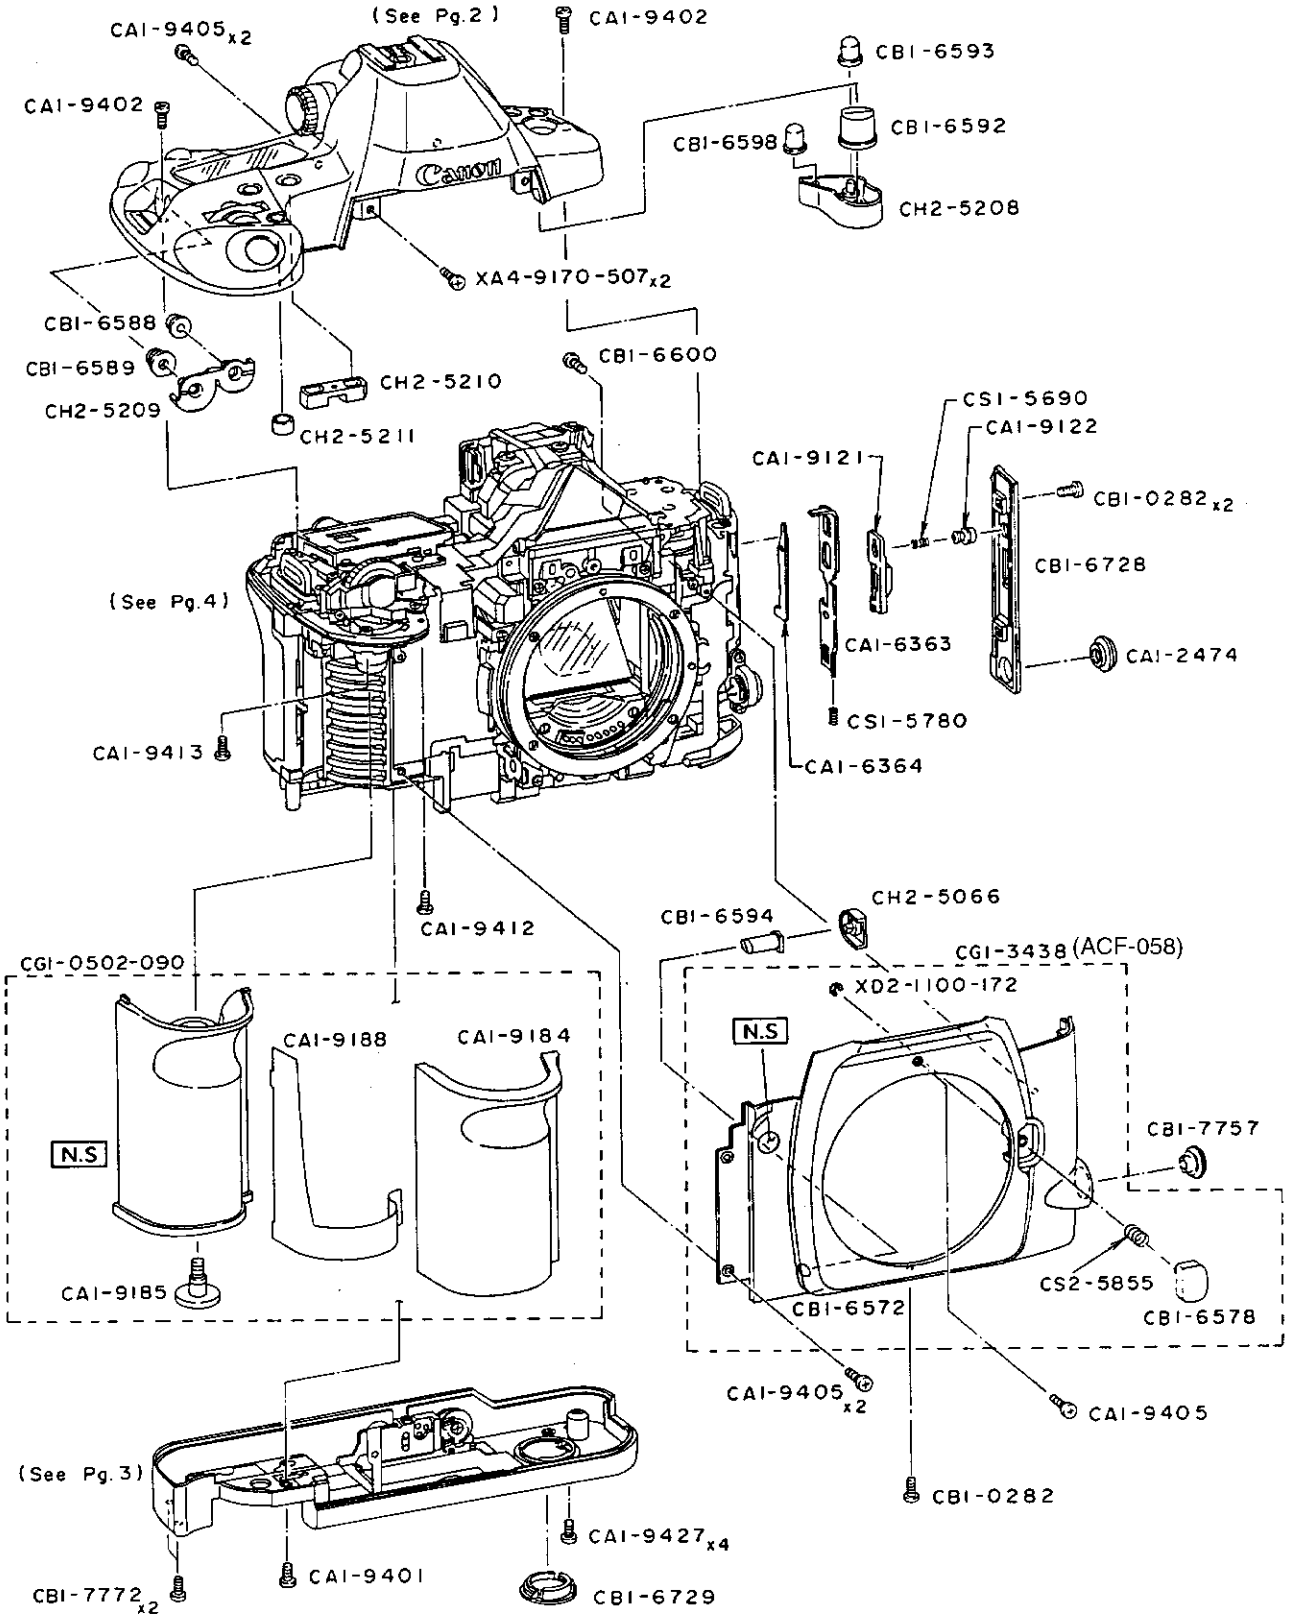
(See Pg.2)
CAI-9405 x2
CAI-9402
CAI-9402
CBI-6593
CBI-6592
CBI-6598
CH2-5208
XA4-9170-507 x2
CBI-6588
CBI-6589
CH2-5209
CH2-5210
CH2-5211
CBI-6600
CSI-5690
CAI-9122
CAI-9121
CBI-0282 x2
CBI-6728
(See Pg.4)
CAI-6363
CAI-2474
CSI-5780
CAI-9413
CAI-6364
CAI-9412
CH2-5066
CBI-6594
CGI-3438 (ACF-058)
CGI-0502-090
XD2-1100-172
N.S
CAI-9188
CAI-9184
N.S
CBI-7757
CAI-9185
CS2-5855
CBI-6578
CBI-6572
CAI-9405 x2
CAI-9405
CBI-0282
(See Pg.3)
CAI-9427 x4
CAI-9401
CBI-7772 x2
CBI-6729

PARTS LIST

REF.No.C12-8361

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CA1-2474-000	A	1	CAP, P.C. TERMINAL
	CA1-6363-000	E	1	HOOK
	CA1-6364-000	E	1	LEVER, LOCK
	CA1-9121-000	D	1	LEVER, LATCH
	CA1-9122-000	E	1	BUTTON, LATCH
	CA1-9184-000	E	1	COVERING, GRIP
	CA1-9185-000		1	SCREW
	CA1-9188-000	E	1	TAPE, DOUBLE SIDED
	CA1-9401-000		1	SCREW
	CA1-9402-000		2	SCREW
	CA1-9405-000		5	SCREW
	CA1-9412-000		1	SCREW
	CA1-9413-000		1	SCREW
	CA1-9427-000		4	SCREW
	CB1-0282-000		3	SCREW
	CB1-6572-000	C	1	COVER, FRONT
	CB1-6578-000	C	1	BUTTON, UNLOOK
	CB1-6588-000	C	1	BUTTON, AE-L
	CB1-6589-000	C	1	BUTTON, AF-SEL
	CB1-6592-000	C	1	BUTTON, MODE1
	CB1-6593-000	C	1	BUTTON, MODE2
	CB1-6594-000	C	1	BUTTON, PV
	CB1-6598-000	C	1	BUTTON, MODE3
	CB1-6600-000		1	SCREW
	CB1-6728-000	D	1	COVER, LATCH
	CB1-6729-000	B	1	CAP,COUPLER
	CB1-7757-000	A	1	CAP, REMOTE
	CB1-7772-000		2	SCREW
	CG1-0502-000	C	1	GRIP UNIT
	CG1-3438-000	C	1	FRONT COVER UNIT
	CH2-5066-000	D	1	SWITCH, STOP-DOWN
	CH2-5208-000	D	1	SWITCH, MODE
	CH2-5209-000	D	1	SWITCH, AV-AF
	CH2-5210-000	D	1	SWITCH, LAMP-AJ
	CH2-5211-000	D	1	SWITCH, FE-L
	CS1-5690-000	D	1	SPRING, COIL
	CS1-5780-000	D	1	SPRING, COIL
	CS2-5855-000	E	1	SPRING, MIF UNLOCK
	XA4-9170-507		2	SCREW
	XD2-1100-172		1	RING, RETAINING(E-TYPE), M1.7

REF. NO. CI2-8361

CANON EOS-3

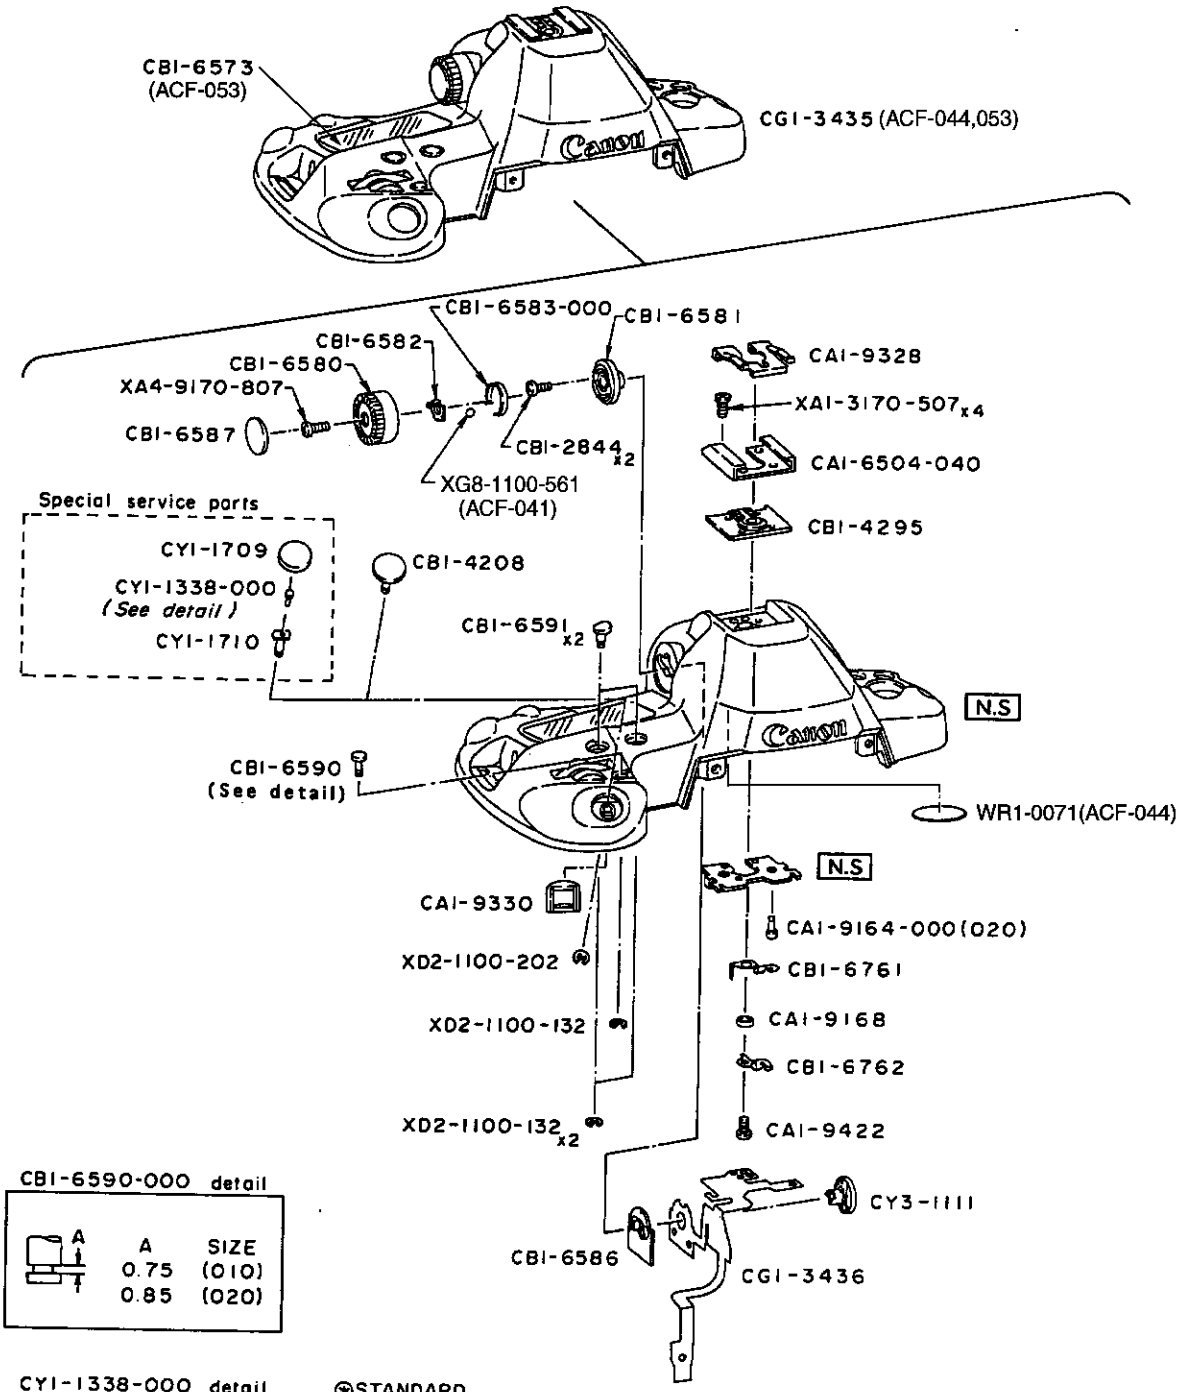

CBI-6590-000 detail

A	SIZE
0.75	(010)
0.85	(020)

CYI-1338-000 detail ⊛STANDARD

A	B	SIZE	A	B	SIZE	A	B	SIZE	A	B	SIZE
1.0mm	2.8mm	(001)	1.5mm	2.8mm	(004)	2.0mm	2.8mm	(007)	2.5mm	2.8mm	(010)
	3.0mm	(002)		3.0mm	(005)⊛		3.0mm	(008)		3.0mm	(011)
	3.2mm	(003)		3.2mm	(006)		3.2mm	(009)		3.2mm	(012)

PARTS LIST

REF.No.C12-8361

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CA1-6504-040	D	1	SHOE, ACCESSORY
	CA1-9164-000(020)	E	1	PIN, FLASH
	CA1-9168-000	D	1	SPACER, INSULATING
	CA1-9328-000	C	1	SPRING, PLATE(BL)
	CA1-9330-000	E	1	CAP, A
	CA1-9422-000		1	SCREW
	CB1-2844-000		2	SCREW
	CB1-4208-000	C	1	BUTTON, PELEASE
	CB1-4295-000	D	1	BASE, ACC SHOE
	CB1-6573-000	C	1	WINDOW, OLC
	CB1-6580-000	D	1	DIAL, NAC-SWITCH
	CB1-6581-000	E	1	PLATE, NAC-SWITCH
	CB1-6582-000	E	1	PLATE, NAC-SWITCH CLICK
	CB1-6583-000	E	1	SPRING, NAC-SWITCH
	CB1-6586-000	E	1	PLATE, NAC-SWITCH FLEX
	CB1-6587-000	C	1	CAP, NAC-SWITCH DIAL
	CB1-6590-000(XXX)	D	1	BUTTON, FE-L
	CB1-6591-000	D	2	BUTTON, L-C
	CB1-6761-000	C	1	CONTACT, ACCESSORY
	CB1-6762-000	C	1	CONTACT, ACCESSORY X
3	CG1-3435-000	C	1	TOP COVER UNIT
	CG1-3436-000	E	1	TOP COVER MODULE UNIT
	CY1-1338-000(XXX)	D	1	SHAFT, ADJUSTING
	CY1-1709-000	C	1	BUTTON, RELEASE
	CY1-1710-000	D	1	SHAFT, RELEASE BUTTON
	CY3-1111-000	D	1	NAC SW CONTACT ASS'Y
	WR1-0071-000	E	1	BEEPER
	XA1-3170-507		4	SCREW
	XA4-9170-807		1	SCREW
	XD2-1100-132		3	WASHER, RETAINING 1.3MM
	XD2-1100-202		1	WASHER, RETAINING(SUS)
	XG8-1100-561		1	BALL, STEEL

CANON EOS-3

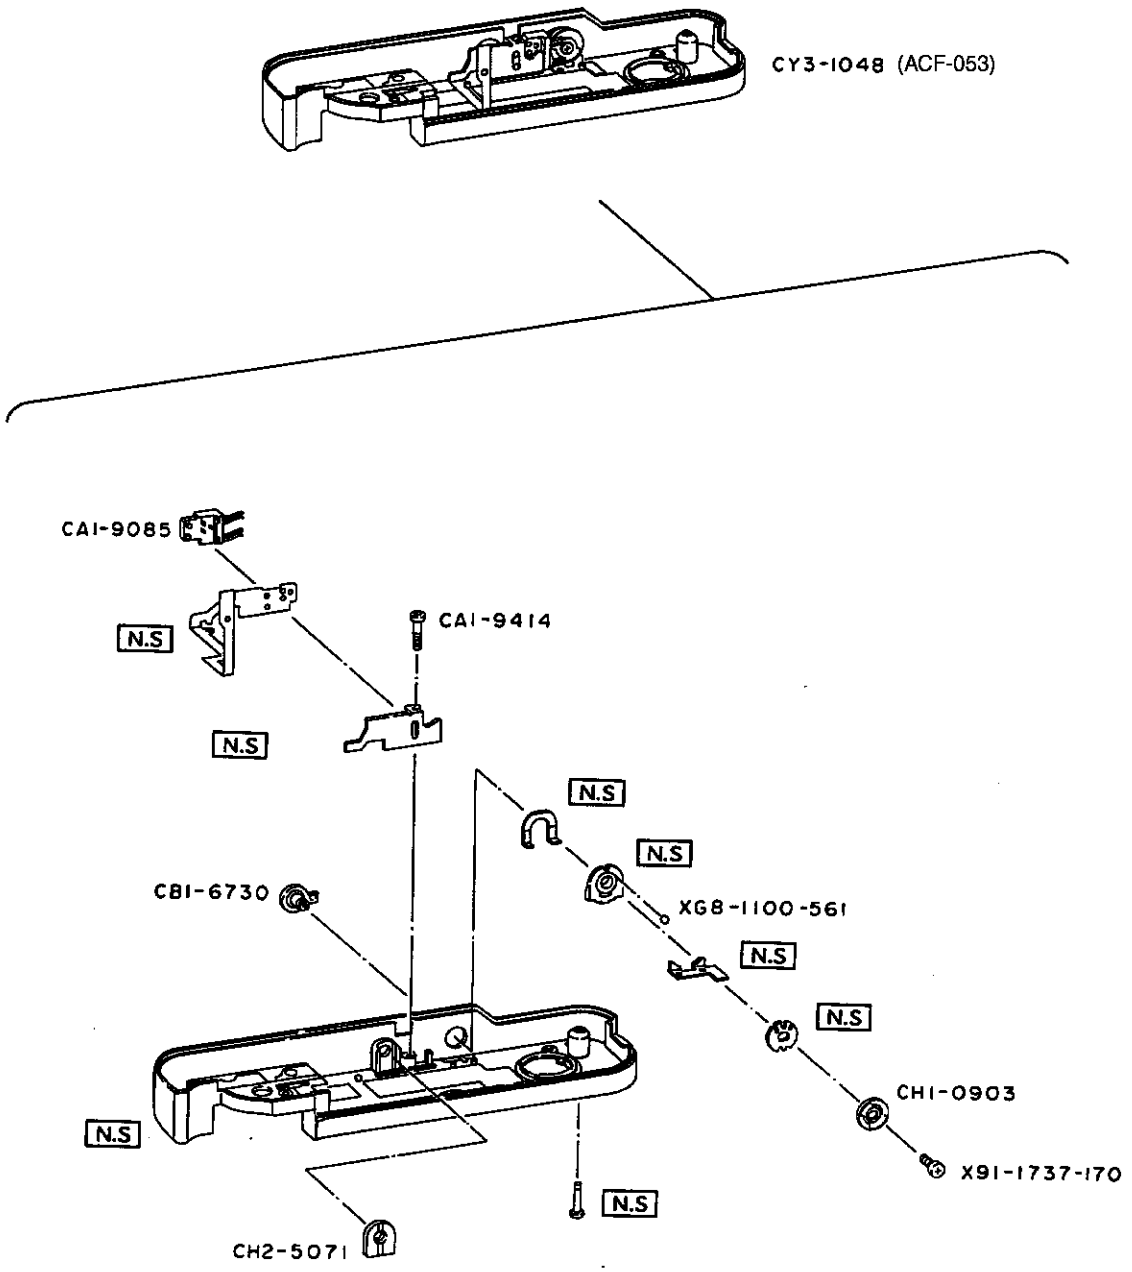
CY3-1048 (ACF-053)
CA1-9085
N.S
CA1-9414
N.S
N.S
N.S
CB1-6730
XG8-1100-561
N.S
N.S
CH1-0903
X91-1737-170
N.S
N.S
CH2-5071

PARTS LIST

REF.No.C12-8361

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CA1-9085-000	D	1	CONTACT, MAIN SWITCH
	CA1-9414-000		1	SCREW
	CB1-6730-000	D	1	LEVER, MAIN SWITCH
	CH1-0903-000	D	1	BOARD, MAIN SWITCH
	CH2-5071-000	E	1	SWITCH, REWIND
	CY3-1048-000	D	1	BOTTOM COVER UNIT
	X91-1737-170		1	SCREW
	XG8-1100-561		1	BALL, CLICK

CANON EOS-3

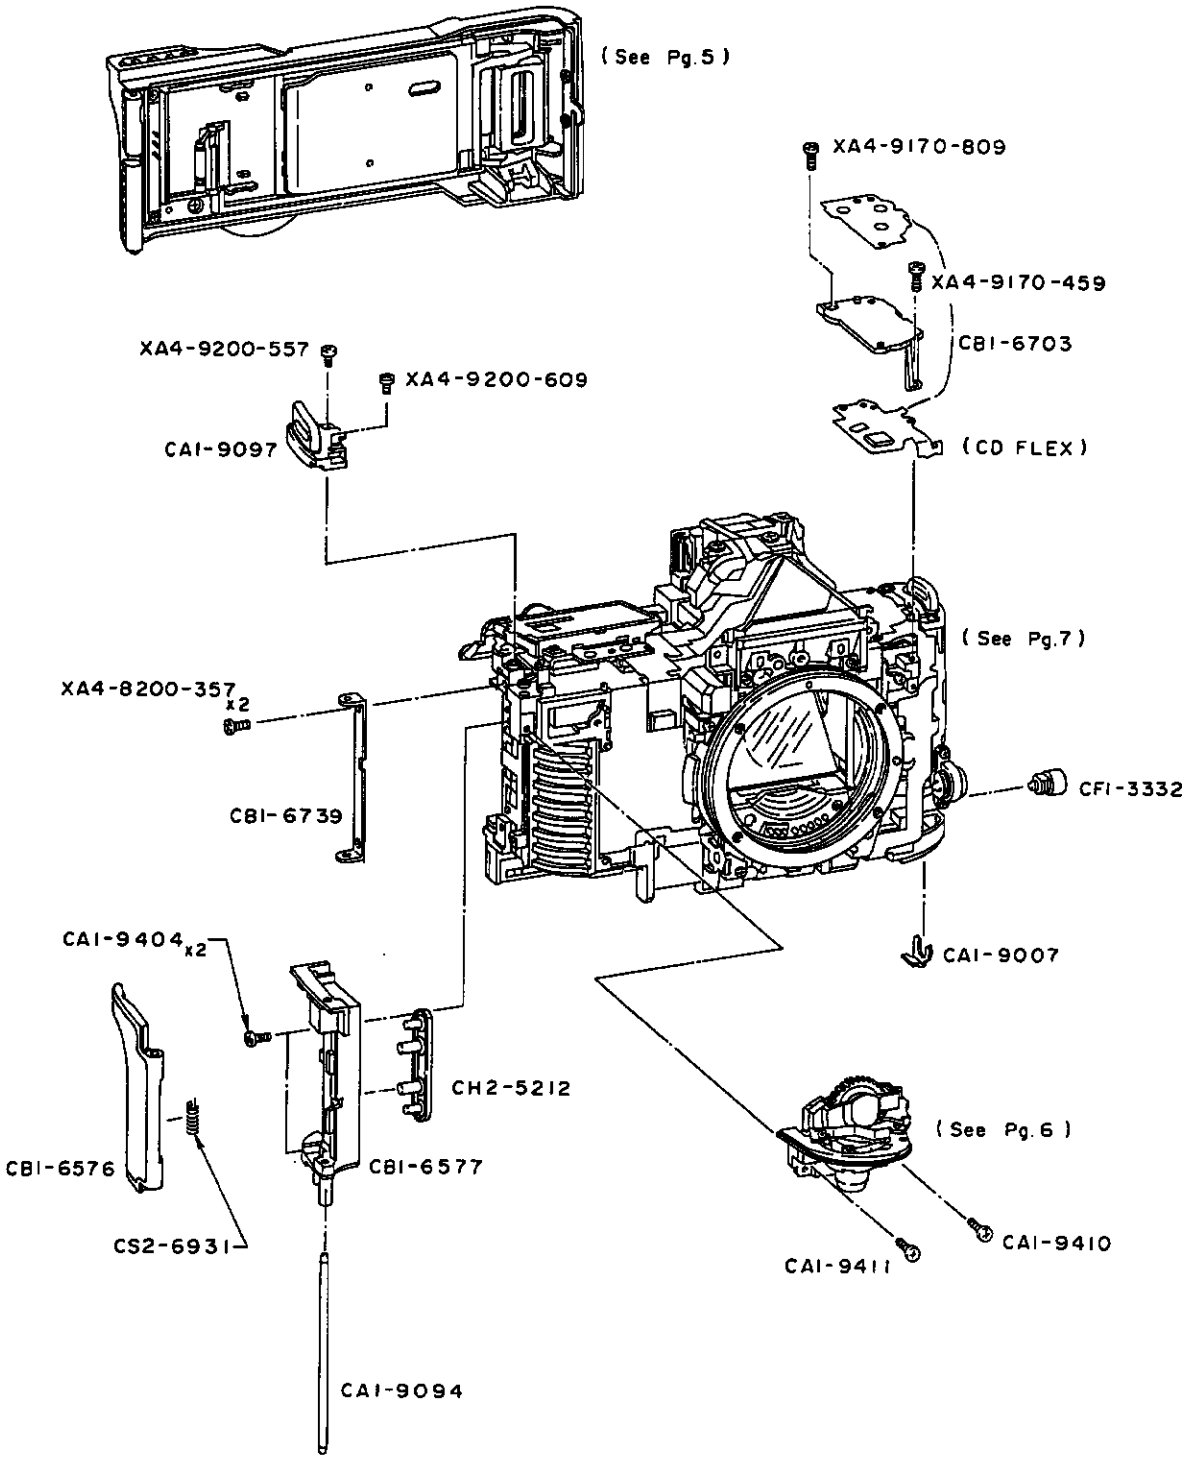
(See Pg.5)
XA4-9170-809
XA4-9170-459
CBI-6703
(CD FLEX)
XA4-9200-557
XA4-9200-609
CAI-9097
(See Pg.7)
XA4-8200-357 x2
CBI-6739
CFI-3332
CAI-9007
CAI-9404 x2
CH2-5212
CBI-6576
CBI-6577
CS2-6931
(See Pg.6)
CAI-9410
CAI-9411
CAI-9094

PARTS LIST

REF.No.C12-8361

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CA1-9007-000	D	1	RING, PC RETAINER
	CA1-9094-000	E	1	SHAFT, PALM WING
	CA1-9097-000	C	1	LUG, NECK STRAP(RIGHT)
	CA1-9404-000		2	SCREW
	CA1-9410-000		1	SCREW
	CA1-9411-000		1	SCREW
	CB1-6576-000	C	1	WING, PARM
	CB1-6577-000	E	1	HOLDER, SWITCH
	CB1-6703-000	E	1	BASE, MODE SWITCH
	CB1-6739-000	E	1	SHAFT, BACK COVER
	CF1-3332-000	C	1	TERMINAL, PC
	CH2-5212-000	D	1	SWITCH, PERM
	CS2-6931-000	D	1	SPRING, COIL
	XA4-8200-357		2	SCREW
	XA4-9170-459		1	SCREW
	XA4-9170-809		1	SCREW
	XA4-9200-557		1	SCREW
	XA4-9200-609		1	SCREW

CANON EOS-3

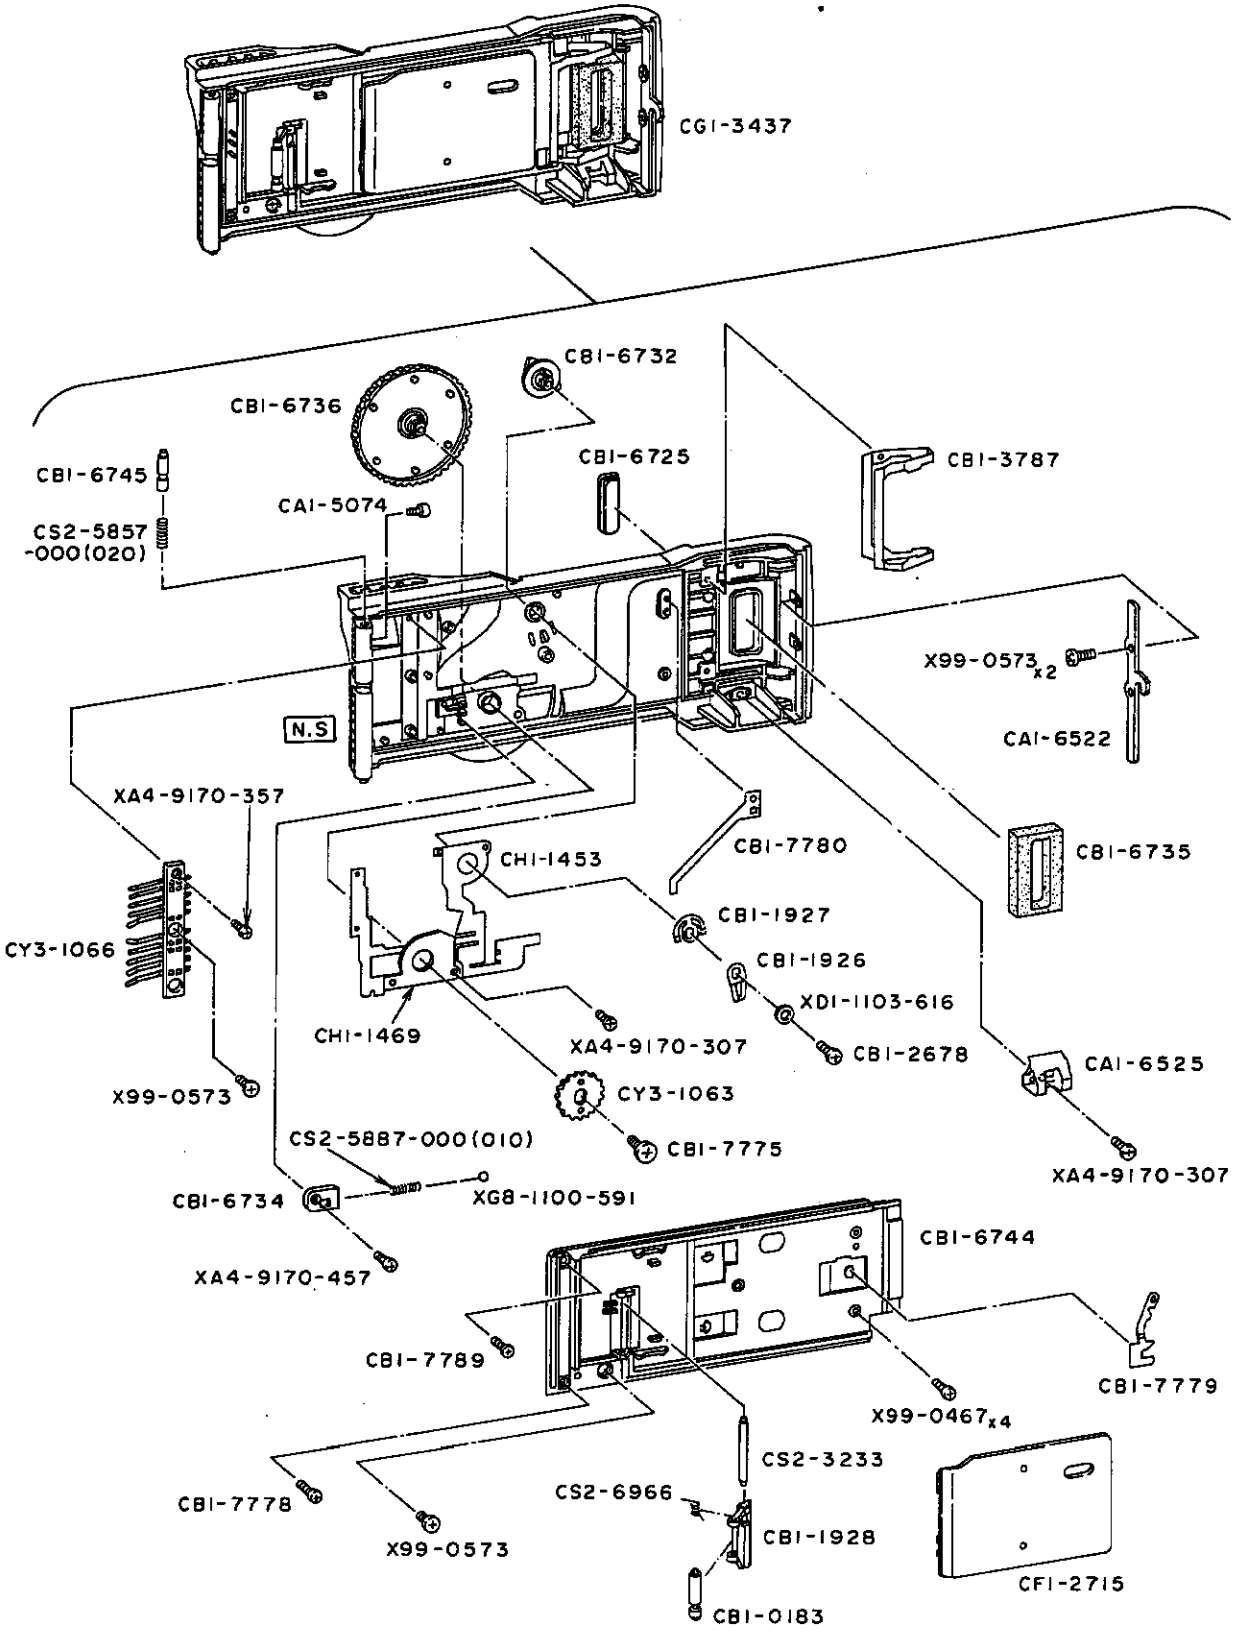
CG1-3437
CBI-6732
CBI-6736
CBI-6725
CBI-3787
CBI-6745
CS2-5857
-000(020)
CAI-5074
X99-0573x2
CAI-6522
N.S
XA4-9170-357
CBI-7780
CBI-6735
CHI-1453
CBI-1927
CY3-1066
CBI-1926
XDI-1103-616
CHI-1469
XA4-9170-307
CBI-2678
CAI-6525
X99-0573
CY3-1063
CBI-7775
CS2-5887-000(010)
XA4-9170-307
CBI-6734
XG8-1100-591
CBI-6744
XA4-9170-457
CBI-7789
CBI-7779
X99-0467x4
CS2-3233
CBI-7778
CS2-6966
CBI-1928
X99-0573
CFI-2715
CBI-0183

PARTS LIST

REF.No.C12-8361

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CA1-5074-000		1	SCREW, STOPPER
	CA1-6522-000	E	1	CLAW, BACK COVER
	CA1-6525-000	E	1	PLATE, SPRING
	CB1-0183-000	D	1	ROLLER-1, BACK COVER GUIDE
	CB1-1926-000	E	1	DETENT, DIAL
	CB1-1927-000	E	1	CONTACT, DIAL LOCK SWITCH
	CB1-1928-000	E	1	HOLDER, ROLLER
	CB1-2678-000		1	SCREW
	CB1-3787-000	E	1	SPRING, CARTRIDGE
	CB1-6725-000	E	1	GLASS, DX WINDOW
	CB1-6732-000	E	1	LEVER, BACK DIAL SWITCH
	CB1-6734-000	E	1	HOLDER, CLICK
	CB1-6735-000	E	1	SHIELD, LIGHT
	CB1-6736-000	E	1	DIAL, BACK COVER
	CB1-6744-000	E	1	COVER, BACK INNER
	CB1-6745-000	E	1	SHAFT, MOVING
	CB1-7775-000		1	SCREW
	CB1-7778-000		1	SCREW
	CB1-7779-000	E	1	PLATE, GND
	CB1-7780-000	E	1	PLATE, GND2
	CB1-7789-000		1	SCREW
	CF1-2715-000	D	1	PLATE, PRESSURE
	CG1-3437-000	C	1	BACK COVER UNIT
	CH1-1453-000	E	1	BP FLEX ASS'Y
	CH1-1469-000	E	1	BACK DIAL PCB
	CS2-3233-000	E	1	SHAFT, ROLLER HOLDER
	CS2-5857-000(XXX)	E	1	SPRING, B-H
	CS2-5887-000(010)	E	1	SPRING, CLICK
	CS2-6966-000	E	1	SPRING, ROLLER
	CY3-1063-000	E	1	CONTACT, DIAL ASS'Y
	CY3-1066-000	E	1	PIN, CONTACTS ASS'Y
	X99-0467-000		4	SCREW
	X99-0573-000		4	SCREW
	XA4-9170-307		2	SCREW
	XA4-9170-357		1	SCREW
	XA4-9170-457		1	SCREW
	XD1-1103-616		1	WASHER
	XG8-1100-591		1	BALL, STEEL

CANON EOS-3

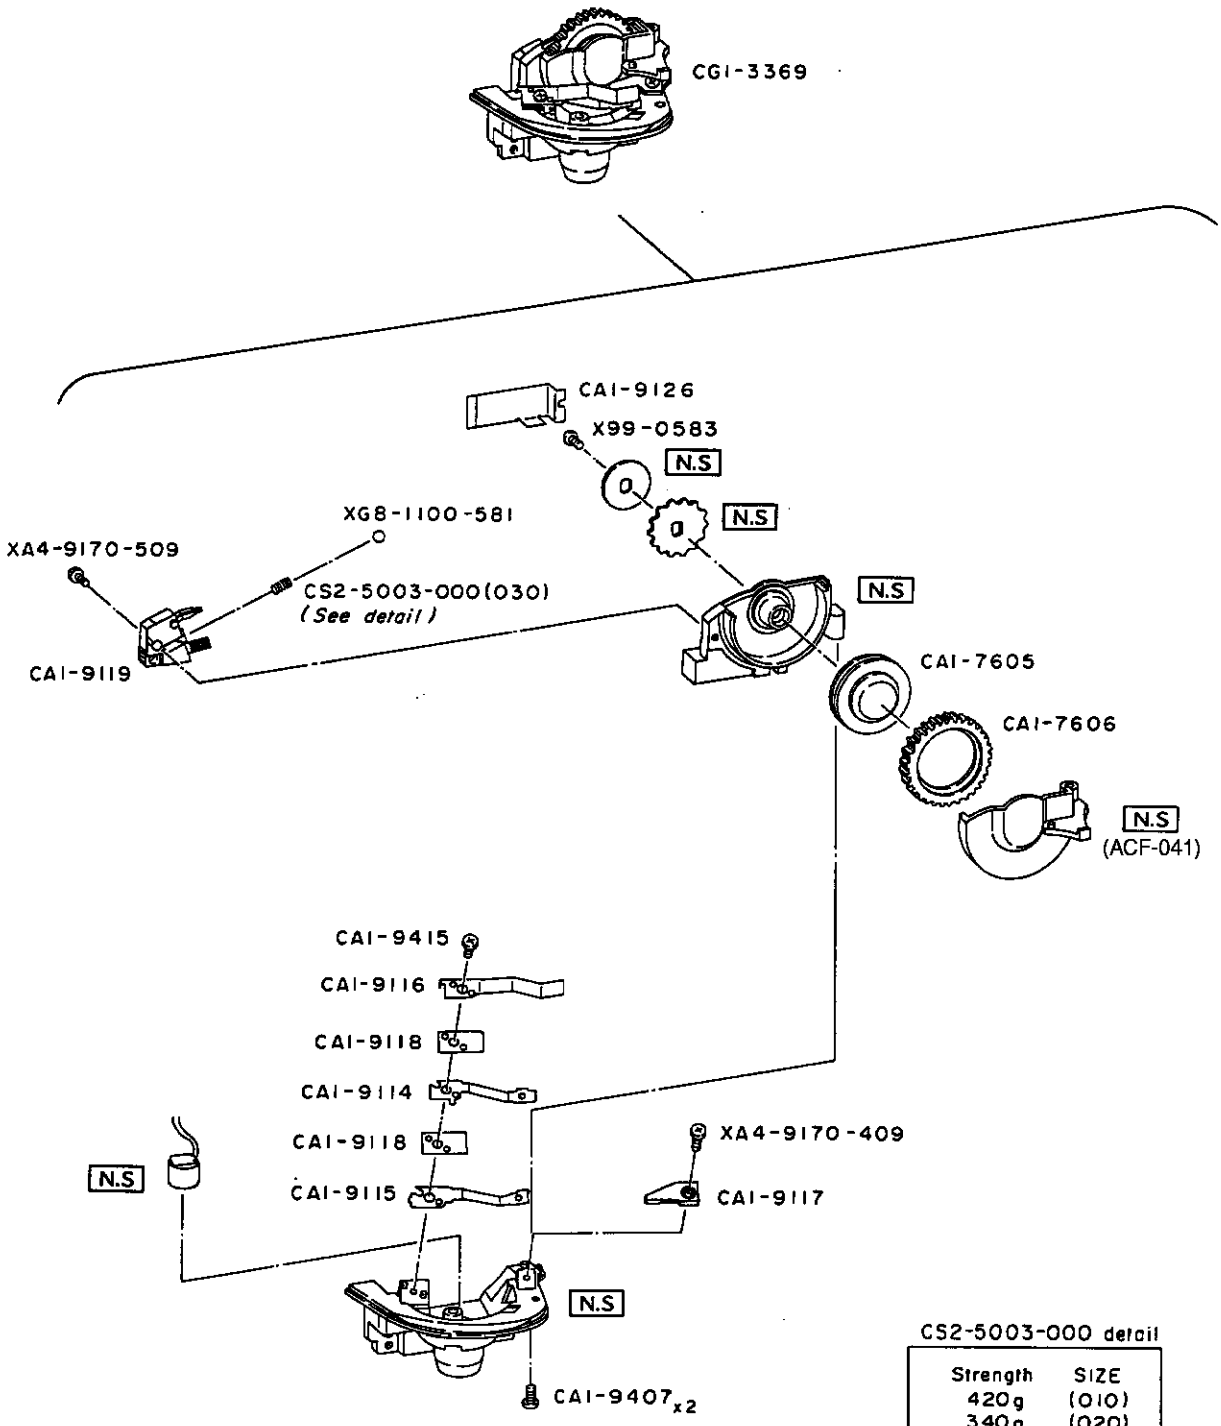

CS2-5003-000 detail

Strength	SIZE
420g	(010)
340g	(020)
300g	(030)

PARTS LIST

REF.No.C12-8361

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CA1-7605-000	E	1	DIAL, MODE CHANGE
	CA1-7606-000	D	1	RING, DIAL
	CA1-9114-000	D	1	CONTACT, RELEASE SWITCH-1
	CA1-9115-000	D	1	CONTACT, RELEASE SWITCH-2
	CA1-9116-000	D	1	CONTACT, RELEASE GROUND
	CA1-9117-000	E	1	PLATE, RELEASE STOPPER
	CA1-9118-000	D	2	SPACER, CONTACT
	CA1-9119-000	E	1	CONTACT, DIAL
	CA1-9126-000	D	1	COVER, DIAL CONTACT
	CA1-9407-000		2	SCREW
	CA1-9415-000		1	SCREW
	CG1-3369-000	D	1	DIAL UNIT
	CS2-5003-000(XXX)	E	1	SPRING, COIL
	X99-0583-000		1	SCREW
	XA4-9170-409		1	SCREW
	XA4-9170-509		1	SCREW
	XG8-1100-581		1	BALL, STEEL

CANON EOS-3

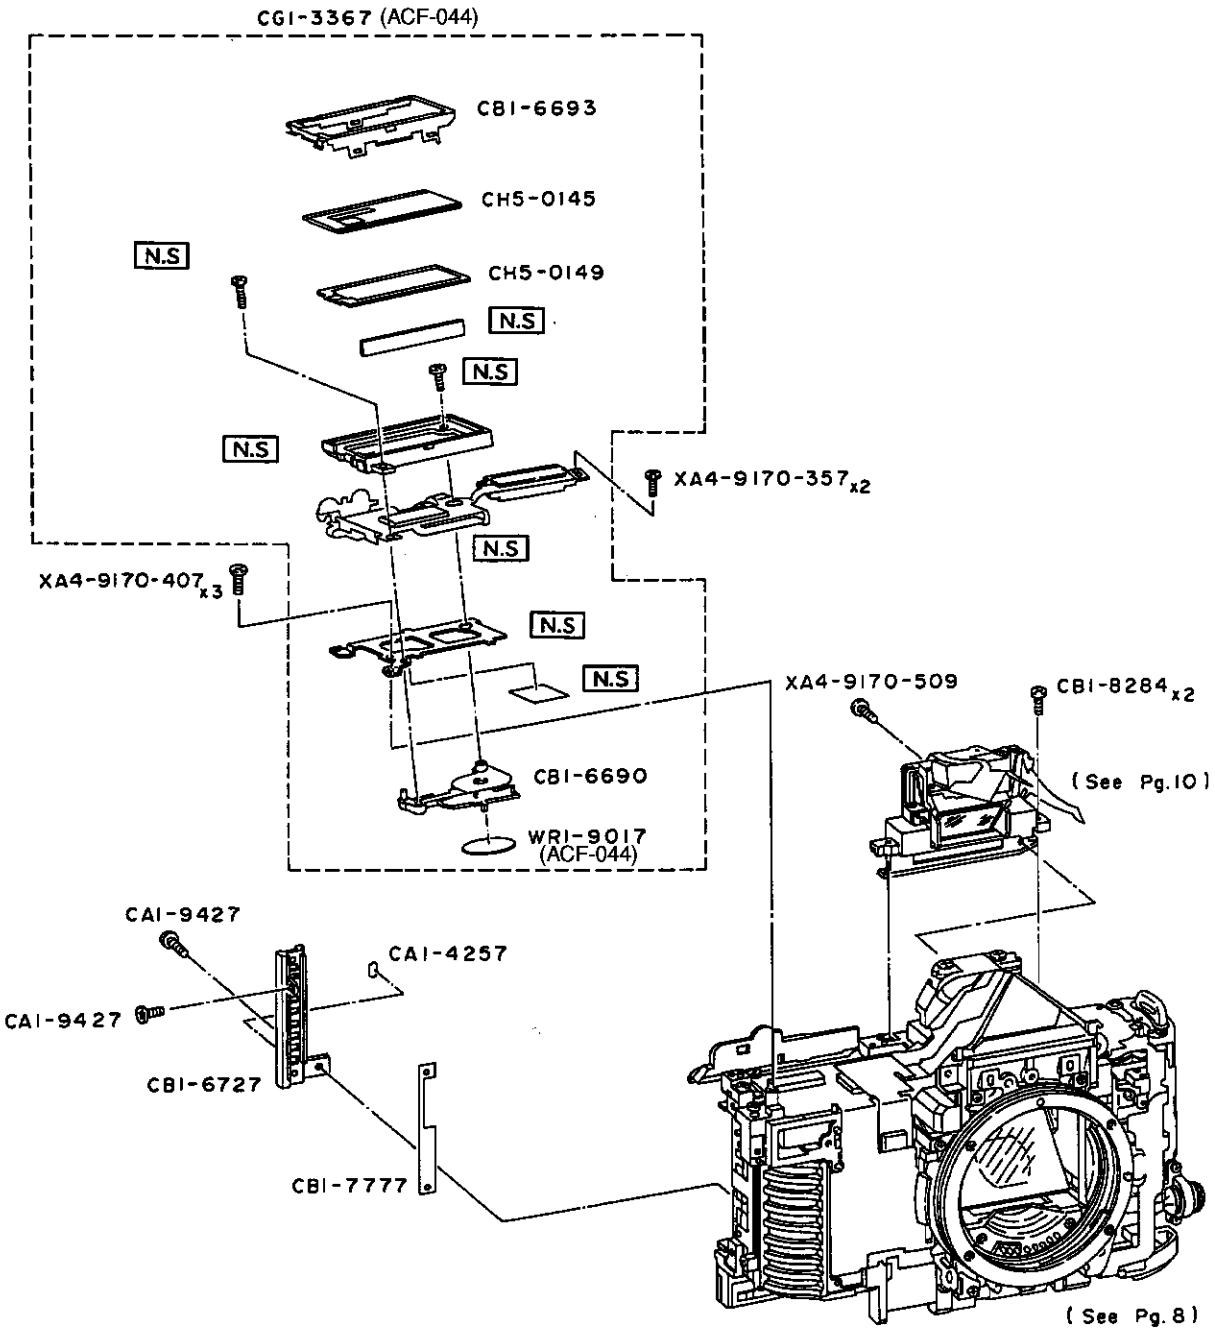
CGI-3367 (ACF-044)
CBI-6693
CH5-0145
CH5-0149
N.S
N.S
N.S
N.S
N.S
XA4-9170-357x2
XA4-9170-407x3
N.S
N.S
CBI-6690
WRI-9017
(ACF-044)
XA4-9170-509
CBI-8284x2
(See Pg.10)
CAI-9427
CAI-4257
CAI-9427
CBI-6727
CBI-7777
(See Pg.8)

PARTS LIST

REF.No.C12-8361

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CA1-4257-000	E	1	SEAL, FILM
	CA1-9427-000	F	2	SCREW, CROSS-RECESS
	CB1-6690-000	E	1	CASE, BZ
	CB1-6693-000	E	1	FRAME, EXTERNAL LCD
	CB1-6727-000	E	1	COVER, BACK CONTACT
	CB1-7777-000		1	PLATE, BACK CONTACT
	CB1-8284-000		2	SCREW
	CG1-3367-000	D	1	DSP MODULE UNIT
	CH5-0145-000	D	1	LCD, EXTERNAL
	CH5-0149-000	E	1	ELECTRO LUMINESCENCE EL
	WR1-9017-000	E	1	BEEPER
	XA4-9170-357		2	SCREW
	XA4-9170-407		3	SCREW
	XA4-9170-509		1	SCREW

CANON EOS-3

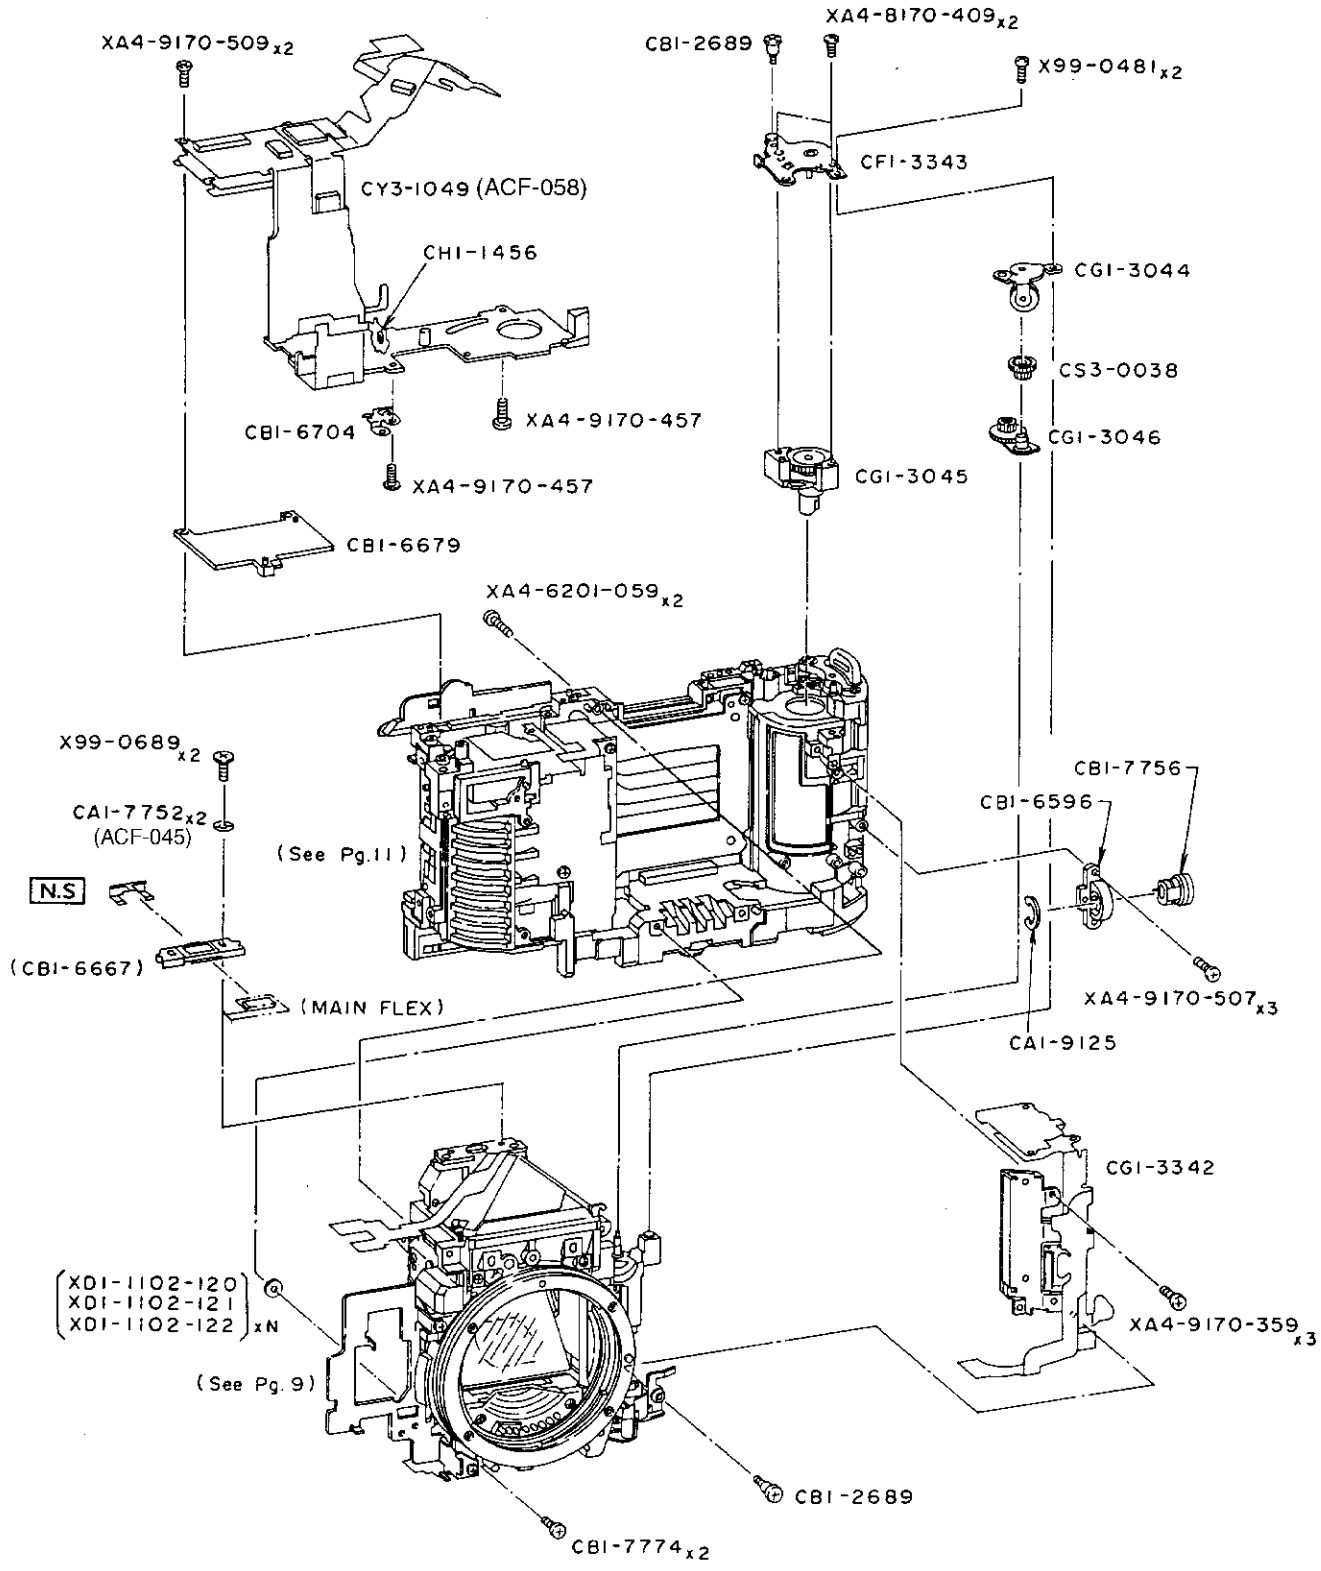
XA4-9170-509x2
CY3-1049 (ACF-058)
CHI-1456
CBI-6704
XA4-9170-457
XA4-9170-457
CBI-6679
XA4-8170-409x2
CBI-2689
X99-0481x2
CFI-3343
CGI-3044
CS3-0038
CGI-3046
CGI-3045
XA4-6201-059x2
X99-0689x2
CAI-7752x2
(ACF-045)
(See Pg.11)
N.S
(CBI-6667)
(MAIN FLEX)
CBI-7756
CBI-6596
XA4-9170-507x3
CAI-9125
CGI-3342
XA4-9170-359x3
XDI-1102-120
XDI-1102-121
XDI-1102-122
xN
(See Pg. 9)
CBI-2689
CBI-7774x2

PARTS LIST

REF.No.C12-8361

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CA1-7752-000	E	2	WASHER, WAVE
	CA1-9125-000	C	1	RING, C
	CB1-2689-000		2	SCREW(S)
	CB1-6596-000	E	1	HOLDER, REMOTE
	CB1-6667-000	E	1	CASE, SPC
	CB1-6679-000	E	1	PLATE, CONNECTOR
	CB1-6704-000	E	1	PLATE, GND RAG
	CB1-7756-000	E	1	CONNECTOR, REMOTE
	CB1-7774-000	F	2	SCREW
	CF1-3343-000	E	1	FORK PRESSURE UNIT
	CG1-3044-000	D	1	REWIND WORM GEAR UNIT
	CG1-3045-000	D	1	FORK GEAR UNIT
	CG1-3046-000	D	1	REWIND PLANETARY GEAR UNIT
	CG1-3342-000	D	1	DX UNIT
	CH1-1456-000	D	1	STOP DOWN FLEX
	CS3-0038-000	D	1	GEAR, REWIND SUN
	CY3-1049-000		1	PCB ASS'Y, MAIN
	X99-0481-000		2	SCREW
	X99-0689-000		2	SCREW
	XA4-6201-059		2	SCREW
	XA4-8170-409		2	SCREW
	XA4-9170-359		3	SCREW
	XA4-9170-457		2	SCREW
	XA4-9170-507		3	SCREW
	XA4-9170-509		2	SCREW
	XD2-1102-120		N	WASHER, COM 0.05mm
	XD2-1102-121		N	SHIM WASHER 0.1mm
	XD2-1102-122		N	SHIM WASHER 0.2mm

CANON EOS-3

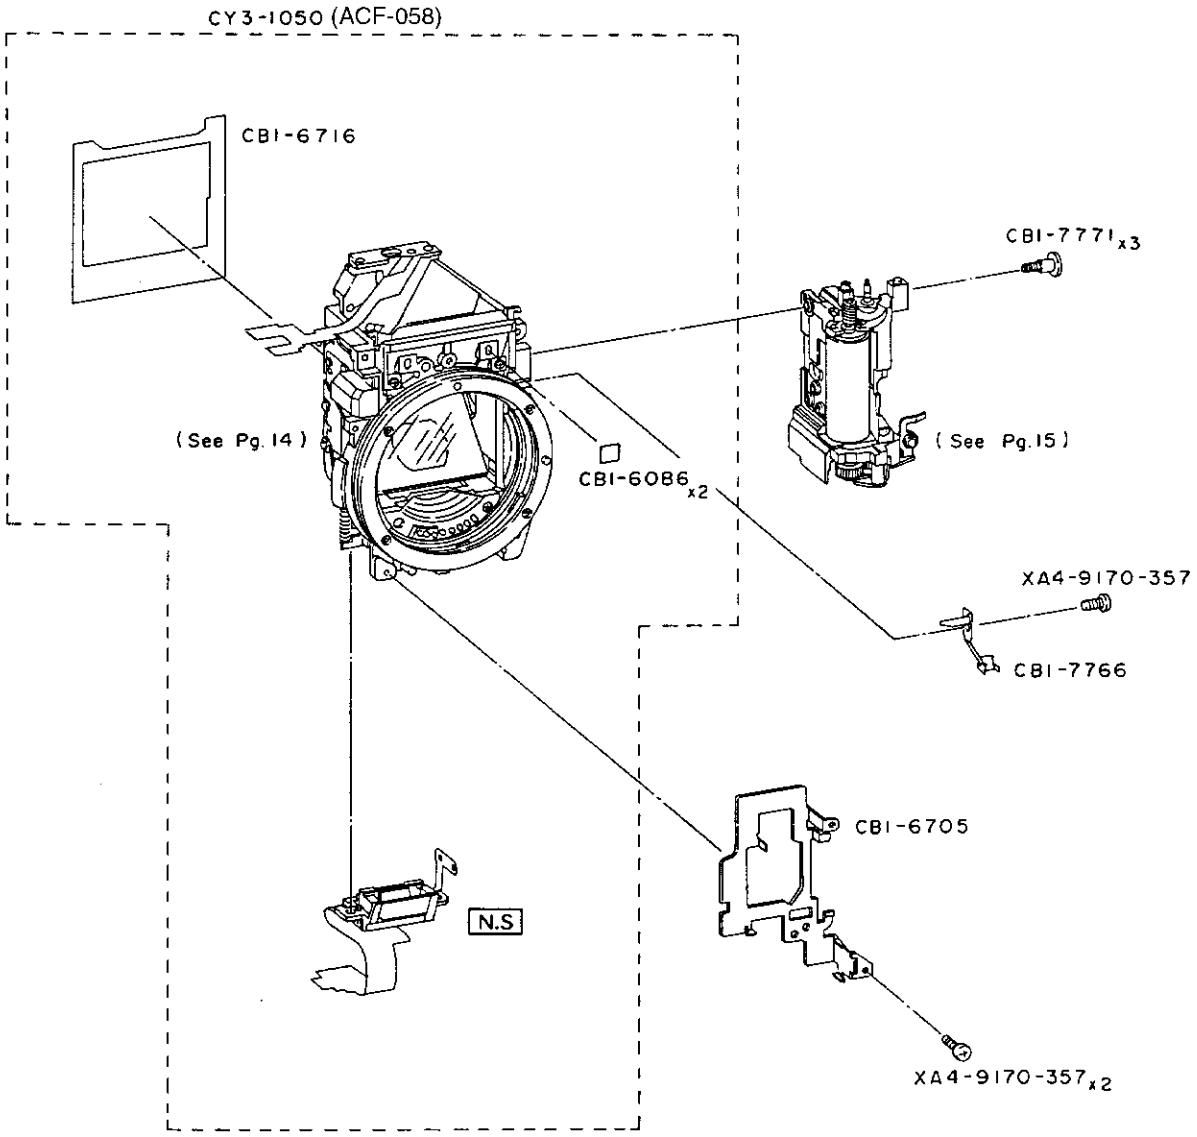
CY3-1050 (ACF-058)
CB1-6716
CB1-7771 x3
(See Pg. 14)
CB1-6086 x2
(See Pg. 15)
XA4-9170-357
CB1-7766
CB1-6705
N.S
XA4-9170-357 x2

PARTS LIST

REF.No.C12-8361

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CB1-6086-000	E	2	FINDER COVER TAPE
	CB1-6705-000	E	1	PLATE, WING
	CB1-6716-000	E	1	SHIELD, LIGHT CURTAIN
	CB1-7766-000	E	1	PLATE, RAG-GND
	CB1-7771-000		3	SCREW
	CY3-1050-000	C	1	FRONT PANEL UNIT
	XA4-9170-357		3	SCREW

CANON EOS-3

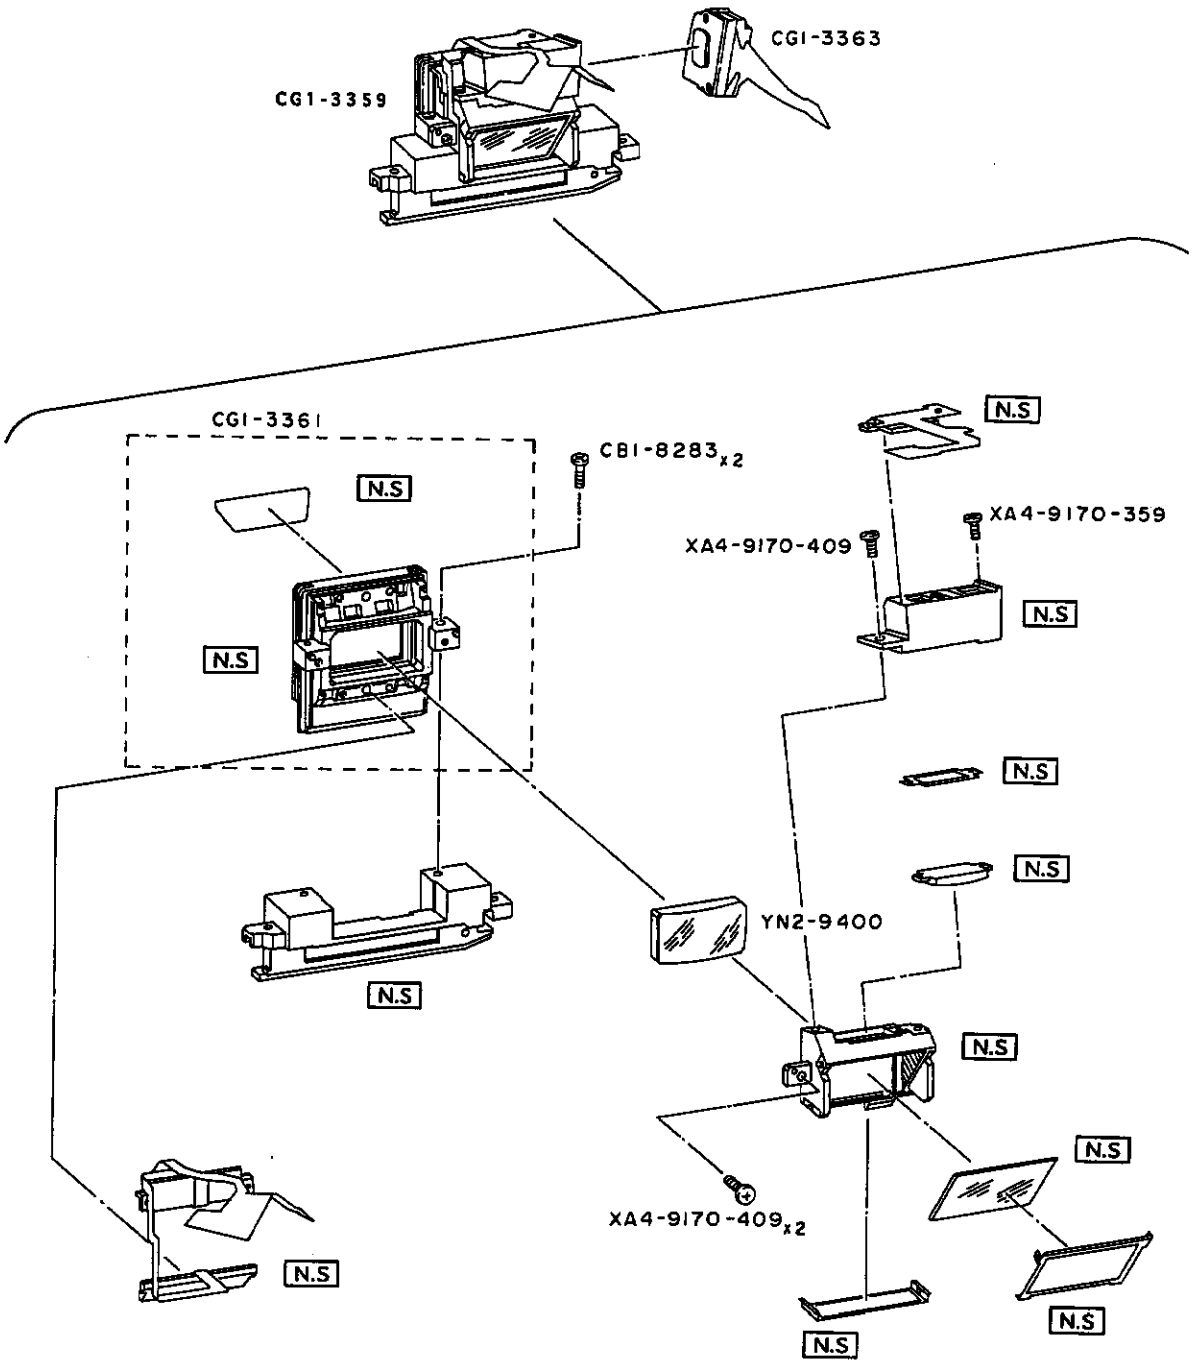
CG1-3359
CG1-3363
CG1-3361
CB1-8283 x2
N.S
XA4-9170-359
XA4-9170-409
YN2-9400
XA4-9170-409 x2

PARTS LIST

REF.No.C12-8361

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CB1-8283-000	F	2	SCREW
	CG1-3359-000	D	1	ECF SENSOR UNIT
	CG1-3361-000	E	1	EYE PIEASE HOLDER UNIT
	CG1-3363-000	D	1	SLC UNIT
	XA4-9170-359		1	SCREW
	XA4-9170-409		3	SCREW
	YN2-9400-000	E	1	LENS, EYE PIEASE2

CANON EOS-3

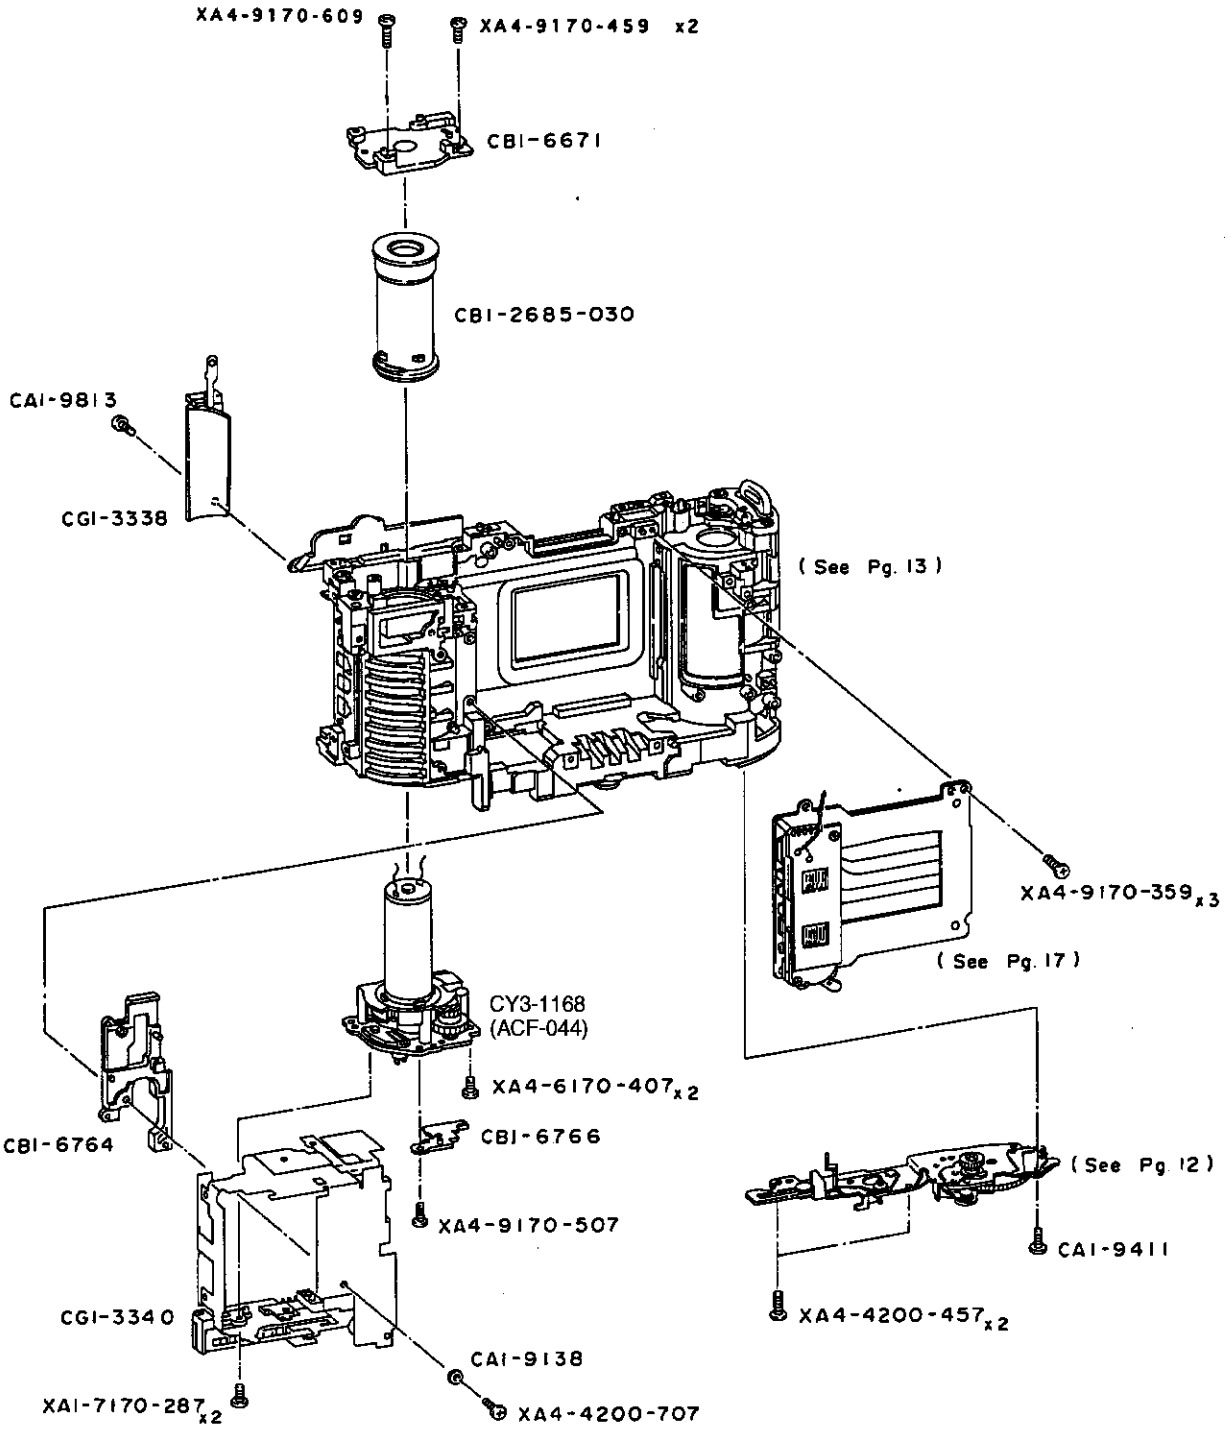
XA4-9170-609
XA4-9170-459 x2
CBI-6671
CBI-2685-030
CAI-9813
CGI-3338
(See Pg. 13)
XA4-9170-359x3
(See Pg. 17)
CY3-1168
(ACF-044)
XA4-6170-407x2
CBI-6764
CBI-6766
XA4-9170-507
(See Pg. 12)
CAI-9411
XA4-4200-457x2
CGI-3340
CAI-9138
XAI-7170-287x2
XA4-4200-707

PARTS LIST

REF.No.C12-8361

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CA1-9138-000	E	1	WASHER, DC/DC
	CA1-9411-000		1	SCREW
	CA1-9813-000		1	SCREW
	CB1-2685-030	E	1	SPOOL
	CB1-6671-000	E	1	BASE, FILM
	CB1-6764-000	E	1	HOLDER, DC/DC
	CB1-6766-000	E	1	BASE, PDB CONNECT
	CG1-3338-000	E	1	FILM LODING SENSOR UNIT
	CG1-3340-000	E	1	CONNECTOR, SYSTEM ASS'Y
	CY3-1168-000	E	1	FILM ADVANCE UNIT
	XA1-7170-287		2	SCREW
	XA4-4200-457		2	SCREW
	XA4-4200-707		1	SCREW
	XA4-6170-407		2	SCREW
	XA4-9170-359		3	SCREW
	XA4-9170-459		2	SCREW
	XA4-9170-507		1	SCREW
	XA4-9170-609		1	SCREW

CANON EOS-3

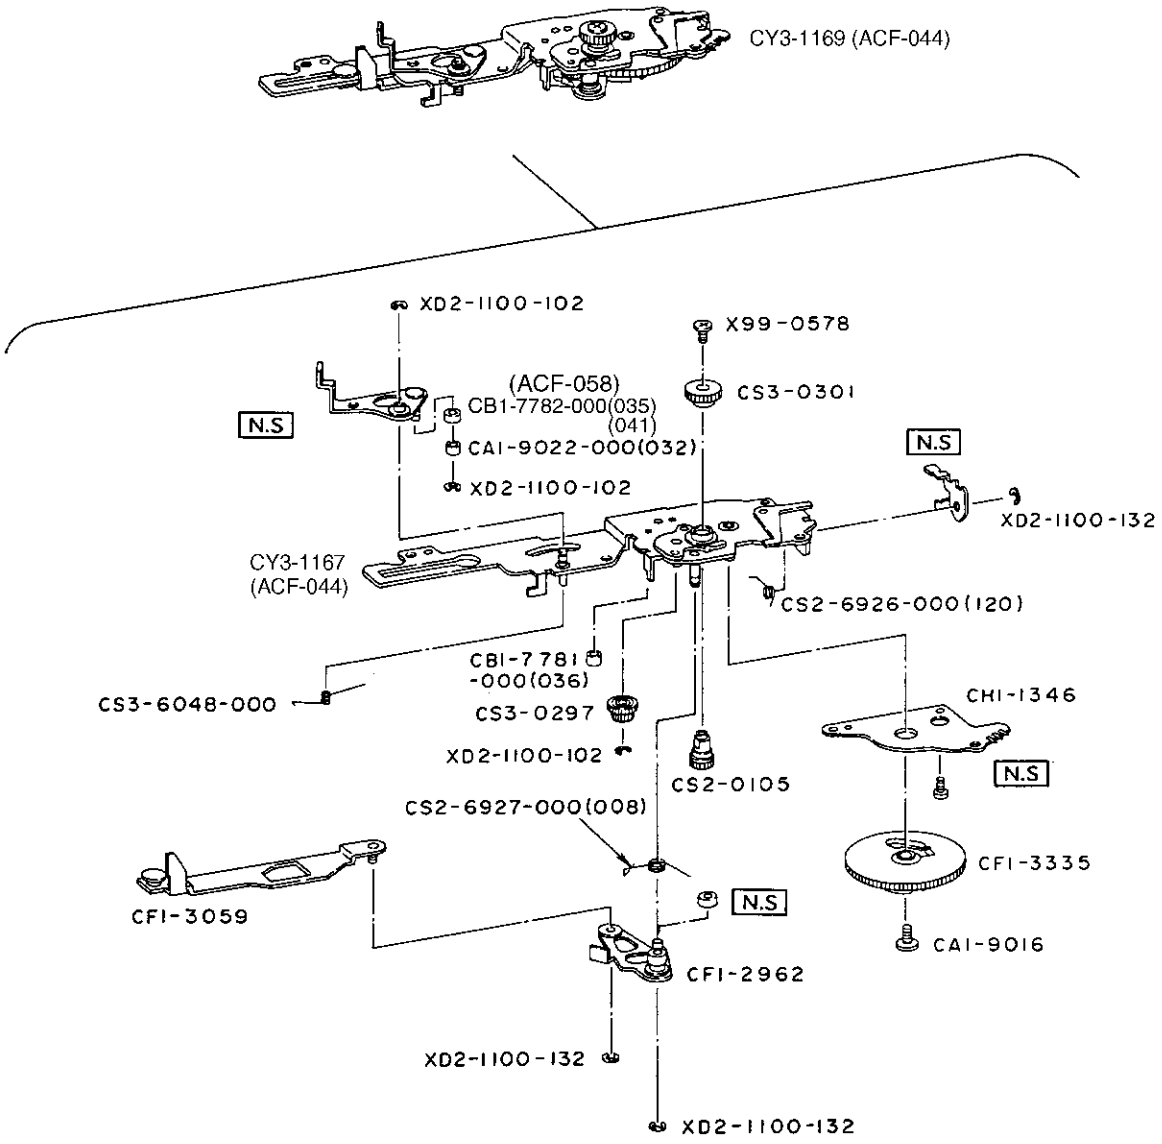
CY3-1169 (ACF-044)
XD2-1100-102
X99-0578
(ACF-058)
CB1-7782-000(035)
(041)
CS3-0301
N.S
CA1-9022-000(032)
XD2-1100-102
N.S
XD2-1100-132
CY3-1167
(ACF-044)
CS2-6926-000(120)
CB1-7781
-000(036)
CS3-6048-000
CS3-0297
XD2-1100-102
CS2-0105
CH1-1346
N.S
CS2-6927-000(008)
CF1-3335
CF1-3059
N.S
CA1-9016
CF1-2962
XD2-1100-132
XD2-1100-132

PARTS LIST

REF.No.C12-8361

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CA1-9016-000		1	SCREW
	CA1-9022-000(032)		1	WASHER, MC
	CB1-7781-000(036)	D	1	RUBBER, CGE STOPPER
	CB1-7782-000(035)(041)	E	1	RUBBER, MC STOPPER
	CF1-2962-000	E	1	CAM FOLLOWER UNIT
	CF1-3059-000	E	1	SHUTTER CHARGE LEVER UNIT
	CF1-3335-000	E	1	CAM GEAR UNIT
	CH1-1346-000	E	1	CHARGE PHASE PCB
	CS2-0105-000	E	1	GEAR, CHARGE2-1
	CS2-6926-000(120)	E	1	SPRING, RELEASE
	CS2-6927-000(008)		1	SPRING
	CS3-0297-000	E	1	GEAR, CHARGE1
	CS3-0301-000	E	1	GEAR, CHARGE2-2
	CS3-6048-000	E	1	SPRING, MC LEVER
	CY3-1167-000	E	1	CHARGE BASE UNIT
	CY3-1169-000	E	1	CHARGE UNIT
	X99-0578-000		1	SCREW
	XD2-1100-102		3	E RING(SUS)
	XD2-1100-132		3	WASHER, RETAINING 1.3MM

CANON EOS-3

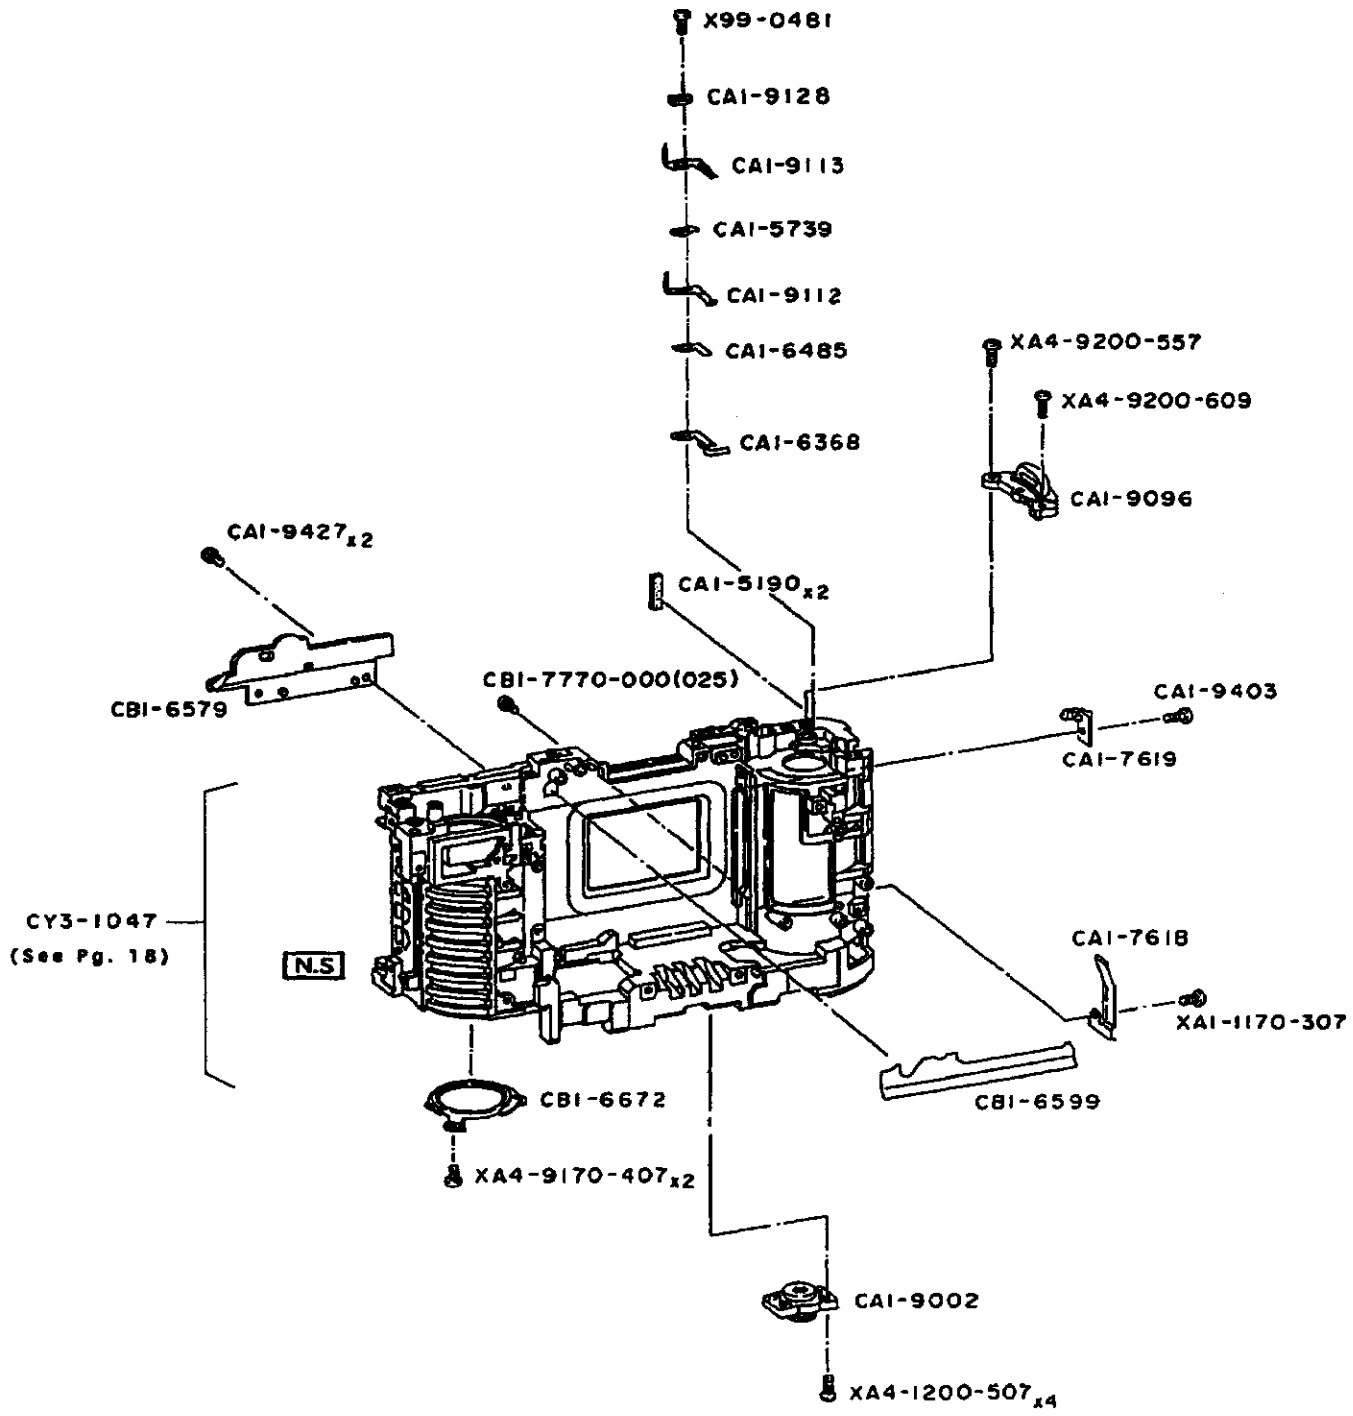
X99-0481
CAI-9128
CAI-9113
CAI-5739
CAI-9112
CAI-6485
CAI-6368
XA4-9200-557
XA4-9200-609
CAI-9096
CAI-9427x2
CAI-5190x2
CBI-6579
CBI-7770-000(025)
CAI-9403
CAI-7619
CY3-1047
(See Pg. 18)
N.S
CAI-7618
XAI-1170-307
CBI-6672
CBI-6599
XA4-9170-407x2
CAI-9002
XA4-1200-507x4

PARTS LIST

REF.No.C12-8361

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CA1-5190-000	C	2	SHIELD, LIGHT
	CA1-5739-000	E	1	INSULATOR
	CA1-6368-000	E	1	PLATE, SAFETY LOCK
	CA1-6485-000	E	1	INSULATOR
	CA1-7618-000	E	1	SPRING, PLATE
	CA1-7619-000	E	1	HOLDER, CASSETTE
	CA1-9002-000	D	1	SOCKET, TRIPOD
	CA1-9096-000	D	1	HOLDER, STRAP(LEFT)
	CA1-9112-000	D	1	CONTACT, BACK COVER SWITCH
	CA1-9113-000	D	1	CONTACT, BACK COVER SW GND COP
	CA1-9128-000	D	1	SPACER
	CA1-9403-000		1	SCREW
	CA1-9427-000		2	SCREW
	CB1-6579-000	E	1	PANEL, BLIND
	CB1-6599-000	E	1	SHIELD, LIGHT
	CB1-6672-000	E	1	SHEET, SPOOL
	CB1-7770-000(025)	E	1	SHAFT,FILM GUIDE
	CY3-1047-000	E	1	BODY UNIT
	X99-0481-000		1	SCREW
	XA1-1170-307		1	SCREW
	XA4-1200-507		4	SCREW
	XA4-9170-407		2	SCREW
	XA4-9200-557		1	SCREW
	XA4-9200-609		1	SCREW

CANON EOS-3

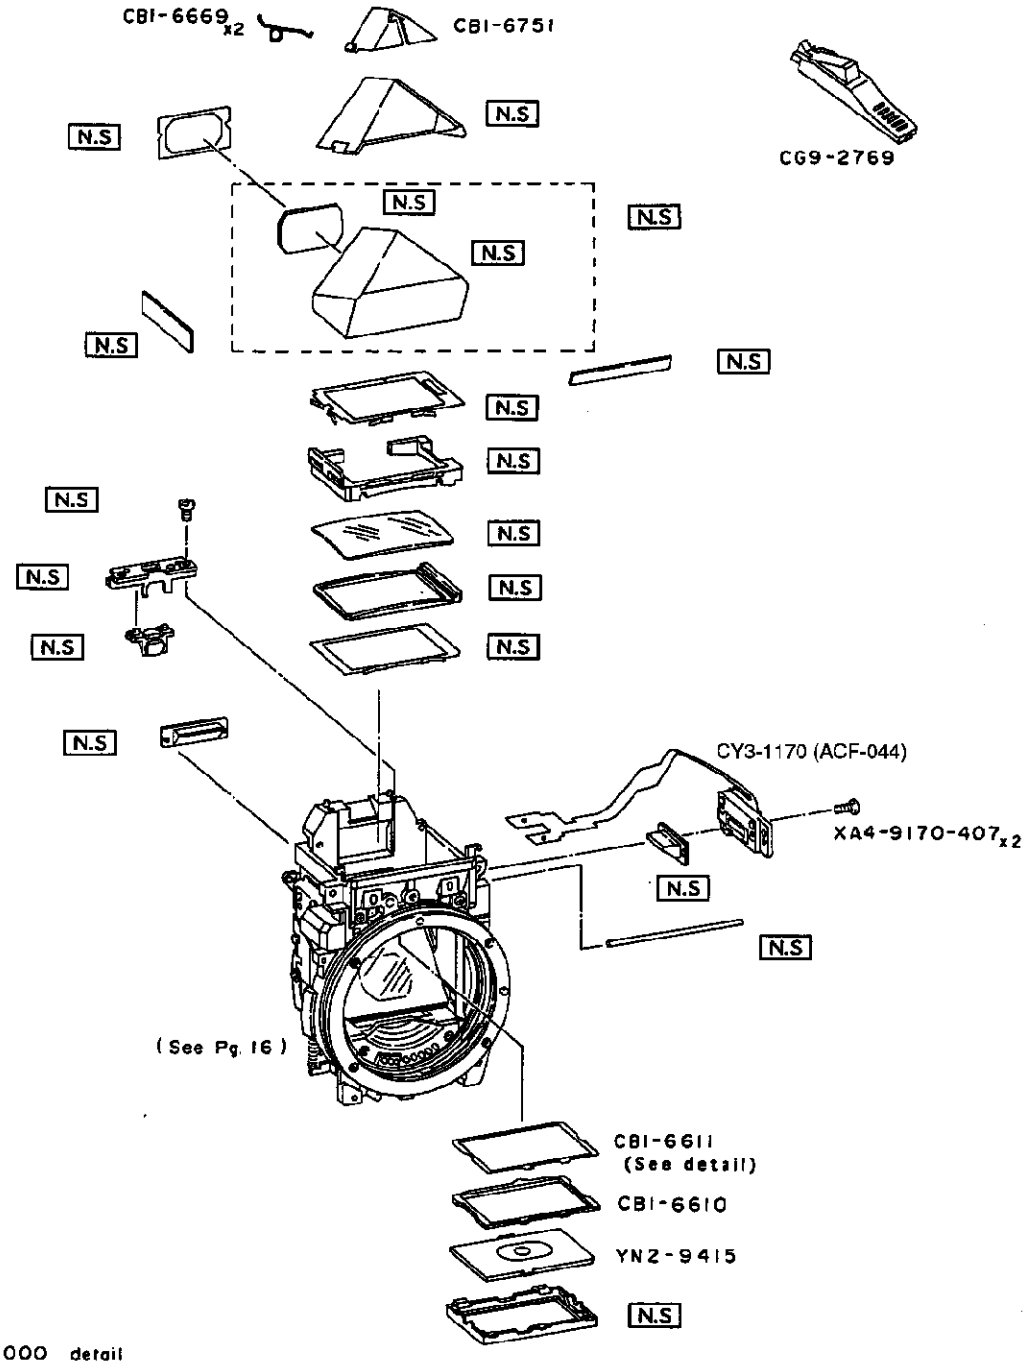

CBI-6611-000 detail

A	SIZE	A	SIZE	A	SIZE
0.03 mm	(003)	0.25 mm	(025)	0.50 mm	(050)
0.05 mm	(005)	0.30 mm	(030)	0.55 mm	(055)
0.10 mm	(010)	0.35 mm	(035)	0.60 mm	(060)
0.15 mm	(015)	0.40 mm	(040)		
0.20 mm	(020)	0.45 mm	(045)		

PARTS LIST

REF.No.C12-8361

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CB1-6610-000	E	1	SPACER, FOCUSING SCREEN
	CB1-6611-000(XXX)	E	1	WASHER, FOCUSING SCREEN
	CB1-6669-000	E	2	SPRING, PENTAPRIZM
	CB1-6751-000	E	1	COVER, PENTAPRIZM
	CG9-2769-000	E	1	TOOL, FOCUSING SCREEN
	CY3-1170-000	E	1	LCD UNIT
	XA4-9170-407		2	SCREW
	YN2-9415-000	C	1	SCREEN, FOCUSING(TYPE C)

CANON EOS-3

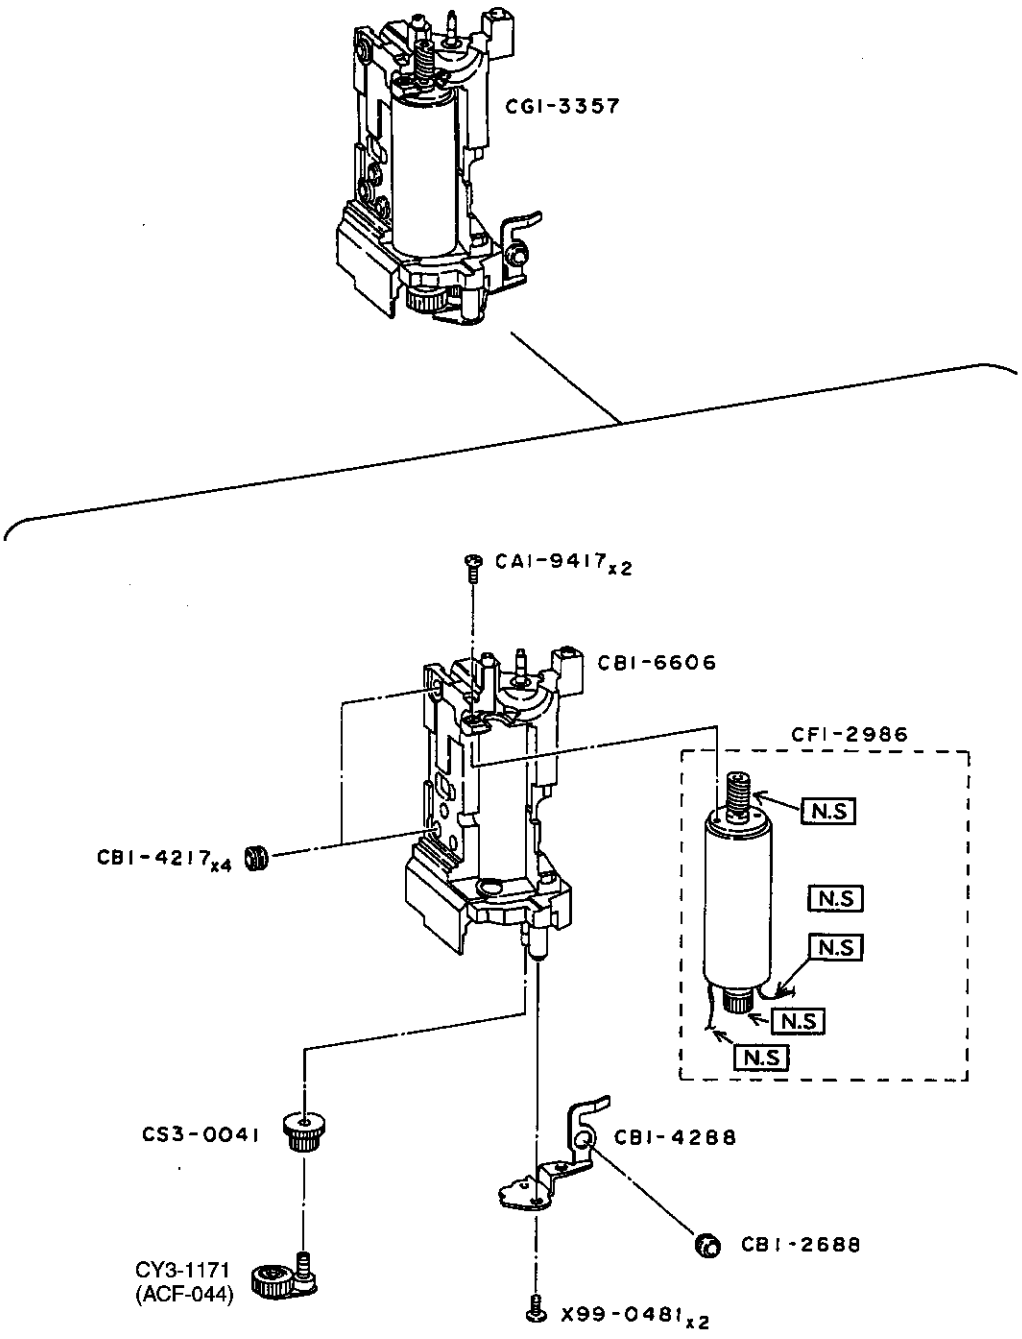
CGI-3357
CAI-9417x2
CBI-6606
CFI-2986
N.S
N.S
N.S
N.S
N.S
CBI-4217x4
CS3-0041
CBI-4288
CBI-2688
CY3-1171
(ACF-044)
X99-0481x2

PARTS LIST

REF.No.C12-8361

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CA1-9417-000		2	SCREW
	CB1-2688-000	E	1	VIBRATION MOUNT
	CB1-4217-000	D	4	MOUNT, VIBRATION
	CB1-4288-000	E	1	PLATE, M2 GEAR
	CB1-6606-000	E	1	BASE, M2 MOTOR
	CF1-2986-000	E	1	MOTOR2 ASS'Y
	CG1-3357-000	D	1	MOTOR2 UNIT
	CS3-0041-000	E	1	GEAR, MOTOR2 SUN
	CY3-1171-000	E	1	MOTOR2 PLANETARY GEAR UNIT
	X99-0481-000		2	SCREW

CANON EOS-3

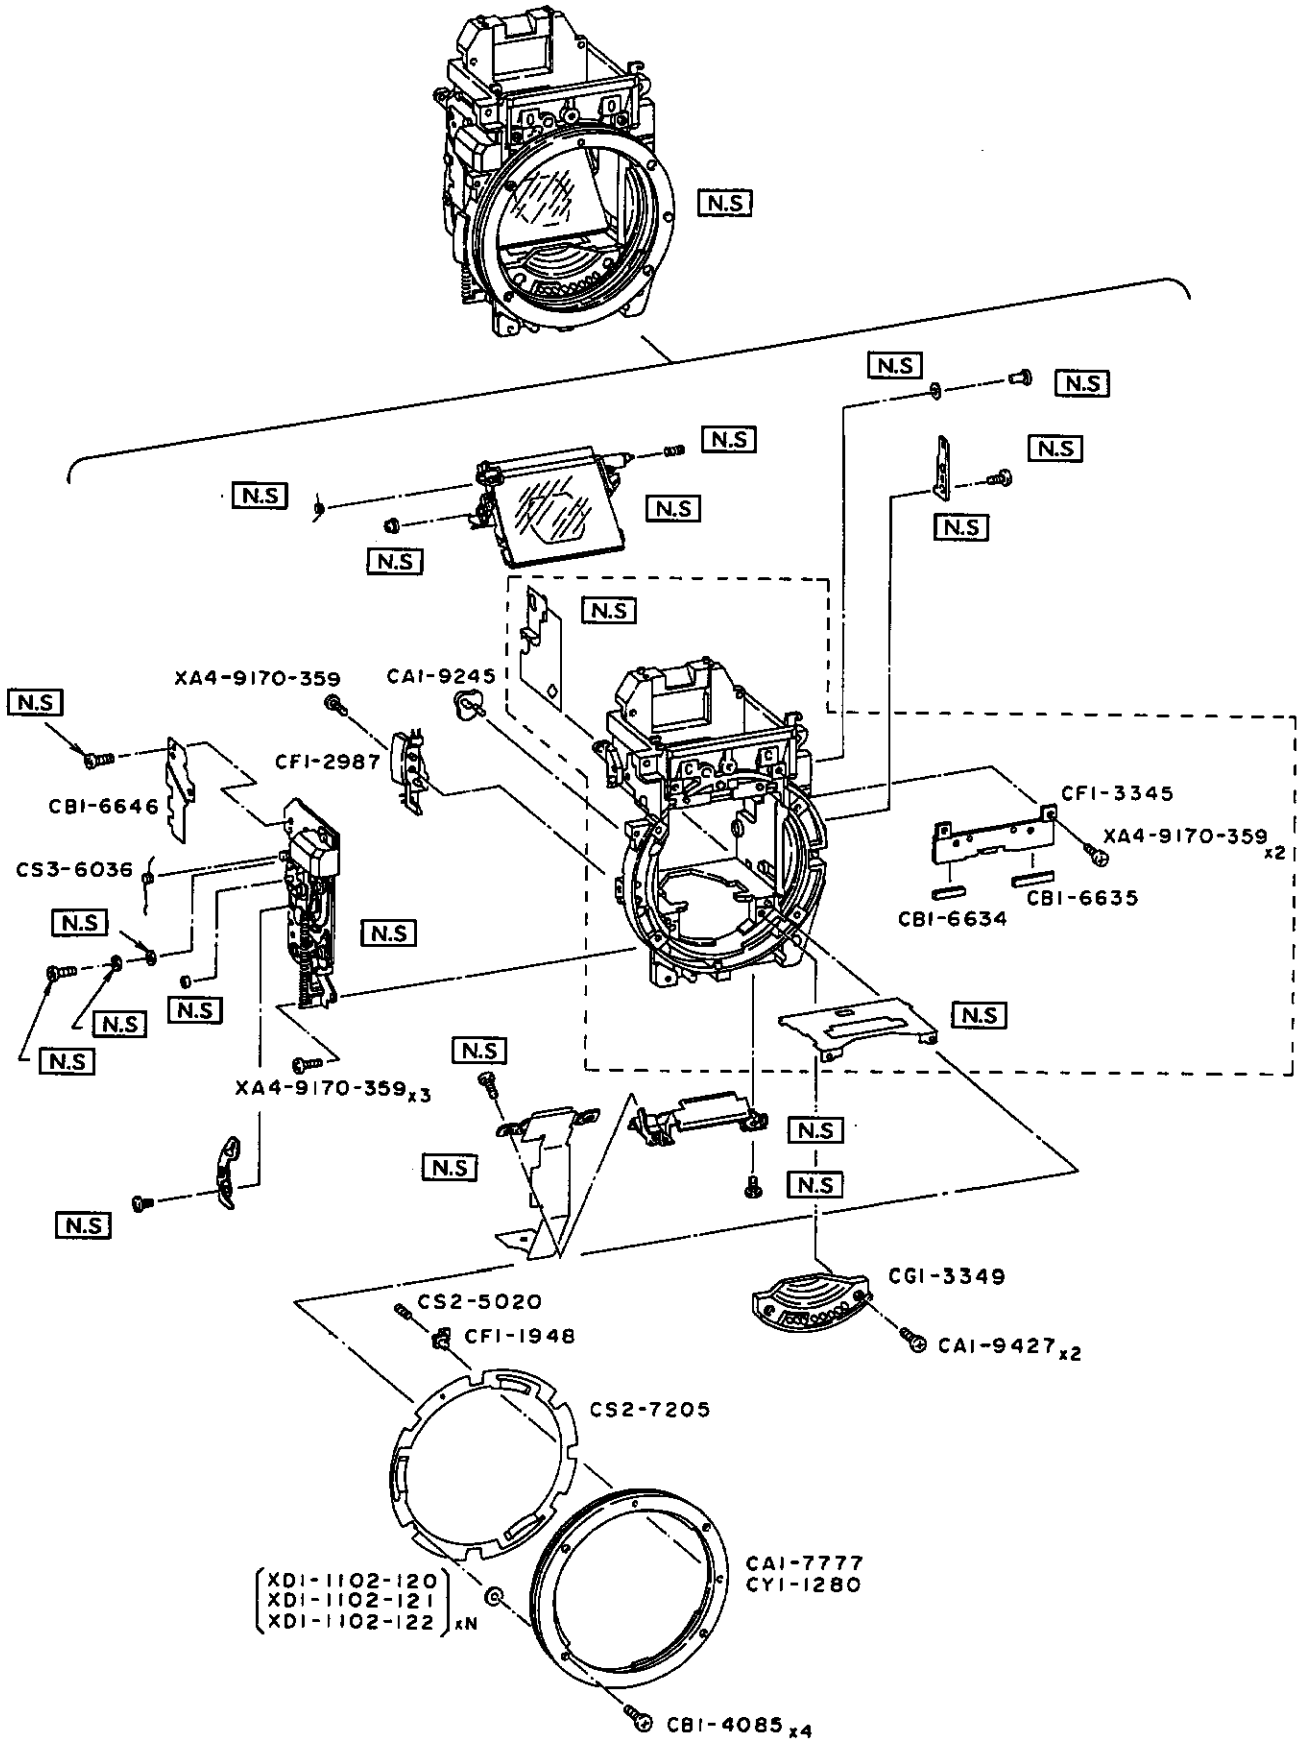
N.S
XA4-9170-359
CAI-9245
CFI-2987
CBI-6646
CS3-6036
XA4-9170-359 x3
CFI-3345
XA4-9170-359 x2
CBI-6634
CBI-6635
CGI-3349
CAI-9427 x2
CS2-5020
CFI-1948
CS2-7205
CAI-7777
CYI-1280
XDI-1102-120
XDI-1102-121
XDI-1102-122
xN
CBI-4085 x4

PARTS LIST

REF.No.C12-8361

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CA1-7777-000	C	1	MOUNT, BODY
	CA1-9245-000	E	1	LEVER, SENSOR
	CA1-9427-000		2	SCREW
	CB1-4085-000		4	SCREW
	CB1-6634-000	E	1	CUSHION, MIRROR1
	CB1-6635-000	E	1	CUSHION, MIRROR2
	CB1-6646-000	E	1	COVER, QUICK RETURN
	CF1-1948-000	E	1	LEVER, LENS LOCK
	CF1-2987-000	D	1	SWITCH, LENS
	CF1-3345-000	E	1	PLATE, LIGHT SHIELD ASS'Y
	CG1-3349-000	E	1	CONTACT, MOUNT ASS'Y
	CS2-5020-000	E	1	SPRING, COIL
	CS2-7205-000	D	1	SPRING, MOUNT
	CS3-6036-000	E	1	SPRING, MIRROR
	CY1-1280-000	E	1	MOUNT, BODY
	XA4-9170-359		6	SCREW
	XD1-1102-120		N	WASHER, COM 0.05mm
	XD1-1102-121		N	SHIM, WASHER 0.1mm
	XD1-1102-122		N	SHIM, WASHER 0.2mm

CANON EOS-3

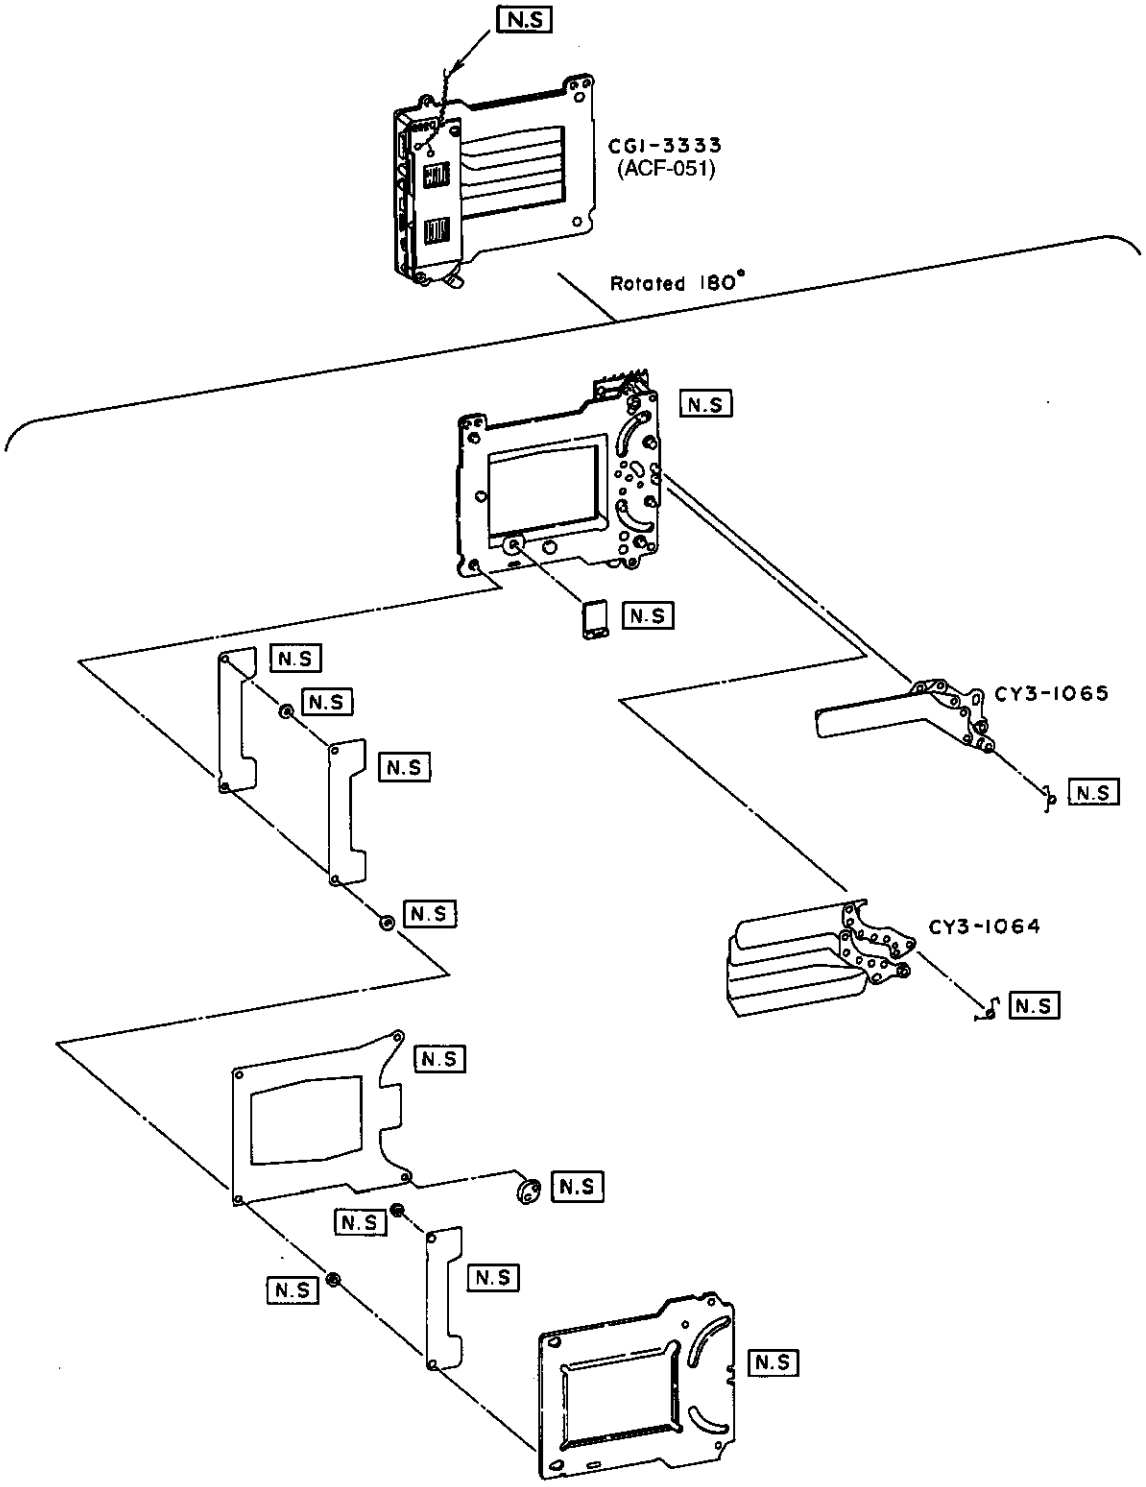
N.S
CG1-3333
(ACF-051)
Rotated 180°
N.S
N.S
N.S
N.S
N.S
N.S
CY3-1065
N.S
CY3-1064
N.S
N.S
N.S
N.S
N.S
N.S
N.S

PARTS LIST

REF.No.C12-8361

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CG1-3333-000	C	1	SHUTTER UNIT
	CY3-1064-000	E	1	SHUTTER 1ST CURTAIN ASS'Y
	CY3-1065-000	E	1	SHUTTER 2ND CURTAIN ASS'Y

REF. C12-8361

CANON EOS3

CY3-1047

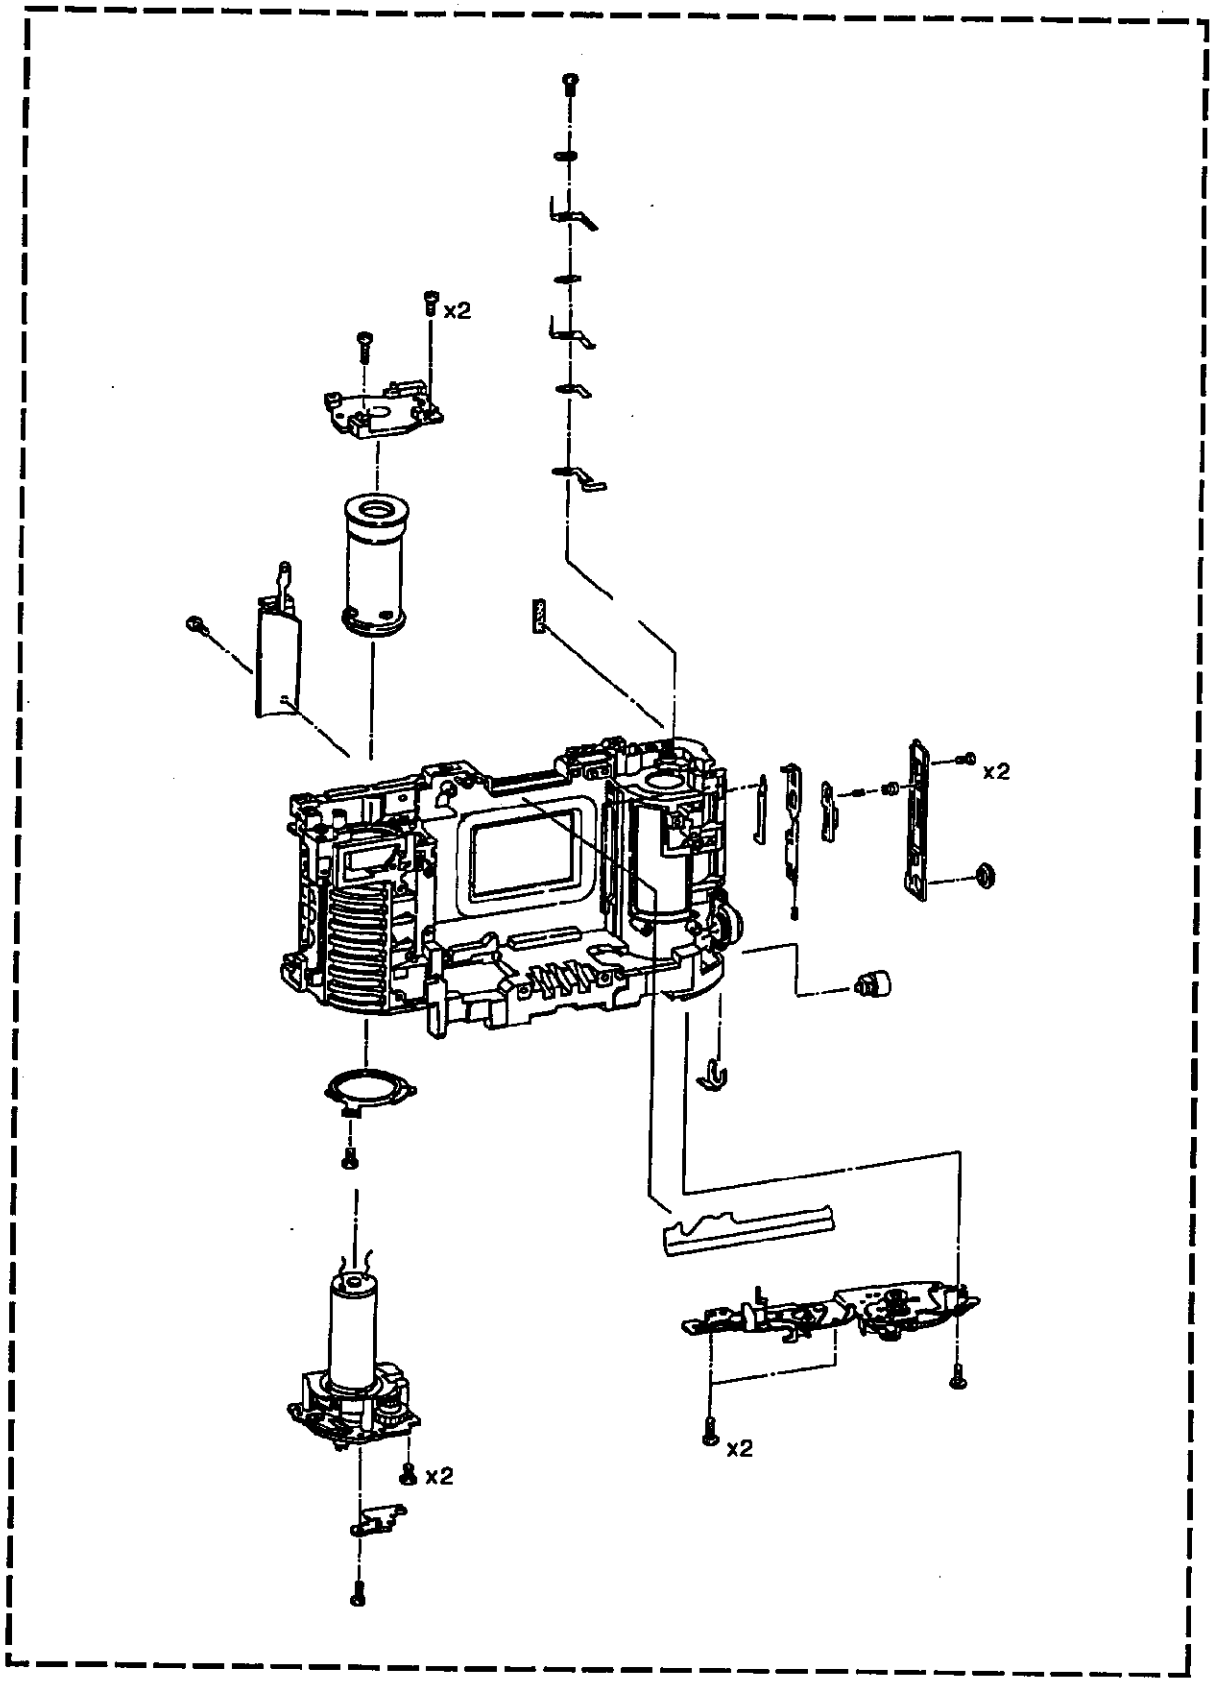

PARTS LIST

REF.No.C12-8361

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CY3-1047-000	E	1	BODY UNIT

REF. NO. C46-2021 (L)
C46-2022 (LL)
C56-1462
C56-1441

CANON SEMI HARD CASE EHII-L
EHII-LL

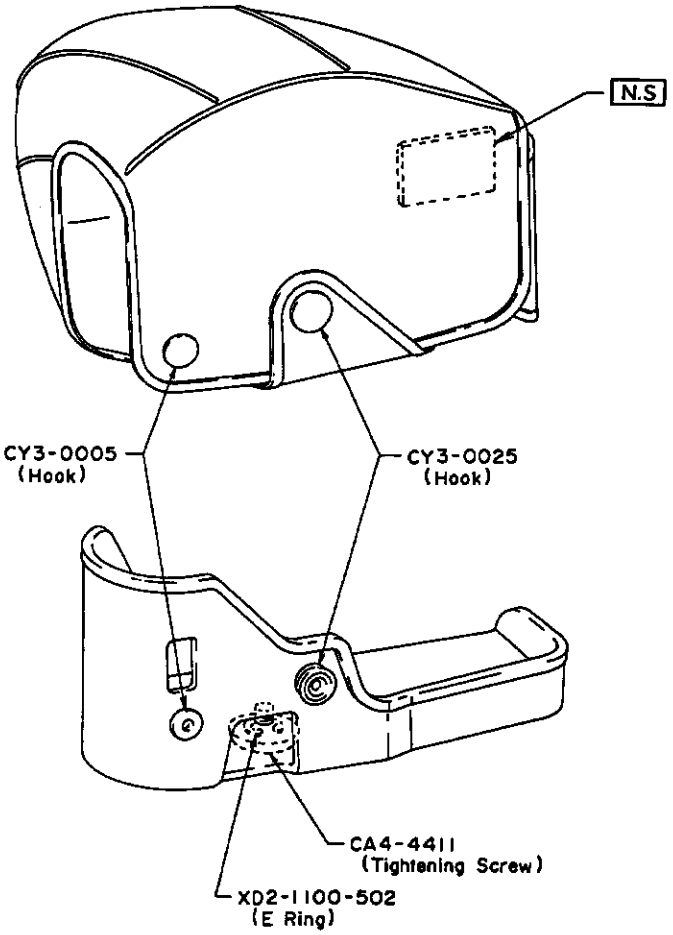

C56-1462 NECK STRAP L3

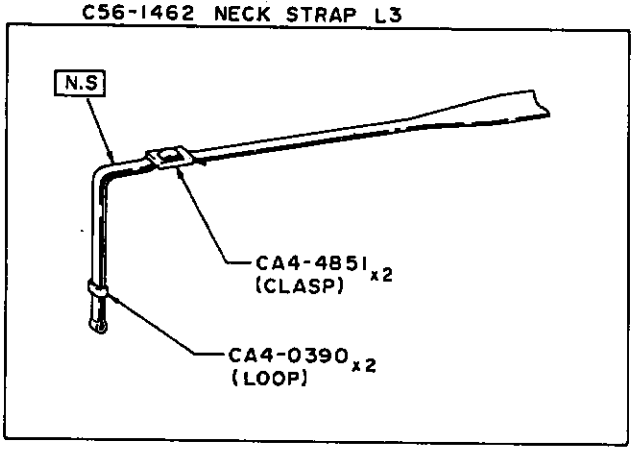

C56-1441 HAND STRAP E1

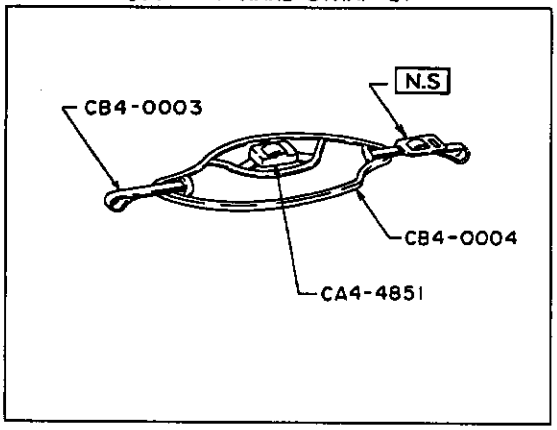

PARTS LIST

REF.No.C46-2021(L),22(LL)
C56-1462,41

NEW	PARTS NO.	CLASS	QTY	DESCRIPTION
	CA4-0390-000	D	2	LOOP
	CA4-4411-000	D	1	TIGHTENING SCREW
	CA4-4851-000	E	3	CLASP
	CB4-0003-000	E	1	STRAP, HAND
	CB4-0004-000	E	1	PAD, SHOULDER
	CY3-0005-000	D	1	HOOK
	CY3-0025-000	D	1	HOOK
	XD2-1100-502		1	RETAINING RING(E-TYPE)